



Remarks :

1. After the Loading Screw (item# 13) is set to the desired level, apply a little silicone to the Loading Screw from underneath so that its level will not change after a period of time.
2. Remove lock plate after installation
3. Two positioning bolts should be on the center of two top plate holes and below top level 3mm after two nuts are fastened. The bolt can not touch top plate
4. Recommended fastener torque for load cell is 90Nm~110Nm

V ₃	APPROVED	Gary.G	DATE	10-08-02
V ₂	APPROVED	Gary.G	DATE	09-02-12
CHECKED	Eric.Q	DATE	10-10-08	
DRAWN	Fred.Z	DATE	08-01-29	

15	Shield			1	
14	Spacer			1	
13	Loading Screw			1	
12	Loading Pin			1	
11	Cap			1	
10	Lock plate			1	
9	Fastener bolt		M6X10	4	
8	Nut		M12X35	2	
7	Positioning bolt		M12X65	2	
6	Top plate			1	
5	Shield fastener bolt		M6X10	2	
4	Load cell fastener bolt		M12X55	2	
3	Washer		Ø12	2	
2	Load Cell			1	563YS
1	Base plate			1	
ITEM	DESCRIPTION	MATERIAL	SPECIFICATION	QTY	REMARKS

ANYLOAD

TITLE:
563YSM3-(500-SE5K) 1b
General Arrangement

DRAWING NO. :
PROJECTION: SHEET 1 OF 1

IMPORTANT NOTICE

This document consisting confidential proprietary information belongs to ANYLOAD who retains all copy and other rights. This document is submitted under a confidential relationship for specific purpose, and the recipient agrees by accepting this document not to supply or disclose any information regarding it to any unauthorized person.