



Changing Channels on the P180 Indicator

1. Check the OCSD current channel: Press "ON/OFF", the display will cycle thru its settings and show the currently used channel (e.g., CH=E6). Make a note of the channel.

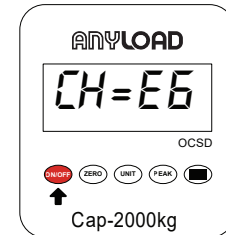


2. Turn off the P180


3. Press and hold "MENU" and "ENTER" together, then press the Start button on the side of the unit. Release all three buttons at once. The screen should display "LOCAL." If it doesn't, repeat the process.

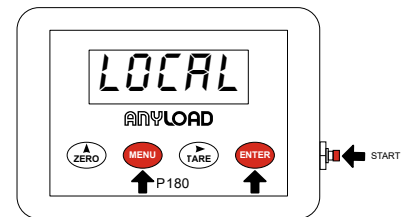


4. Once "LOCAL" is displayed, Press "ENTER". The display will cycle through to "LOCAL" again.

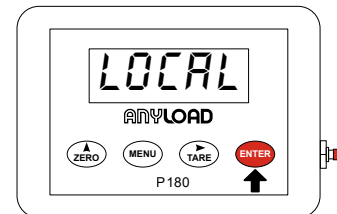

5. Press "MENU", the Channel will be displayed (e.g., "CH E3").

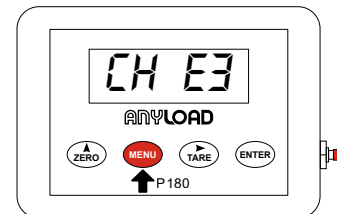

6. Press "ZERO" to change the digit values and "TARE" to move between the digits. Make sure the channel matches the OCSD.

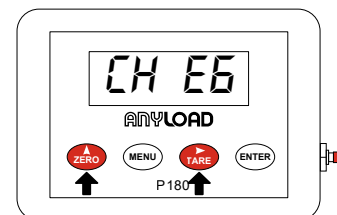

7. Press "ENTER" to save the channel.