

Unit 18, 7228 Winston Street, Burnaby, B.C. V5A 2G9 Tel: +1 604 420 2130 Fax: +1 866 612 9088 Email:info@anyload.ca

110BHM3 Weigh Module Installation Guide





Contents

1. Introduction	3
2. Replacement Parts & Installation Tools	4
3. Installation Steps	4
4. Integral Installation	6
5. Dimensions	7



1/ Introduction

Anyload Transducer Co. Ltd.

Unit 18, 7228 Winston Street, Burnaby, B.C. V5A 2G9 Tel: +1 604 420 2130 Fax: +1 866 612 9088 Email:info@anyload.ca




- To use with tension link load cell 110BH
- Capacities: 500kg...10t.
- Tension loading design, no threaded connection in between.
- Self checking, patented hole design provides high repeatability.
- Multi-directional movement.
- Can withstand bigger bending and torsional force while providing a higher

safety factor



Unit 18, 7228 Winston Street, Burnaby, B.C. V5A 2G9 Tel: +1 604 420 2130 Fax: +1 866 612 9088 Email:info@anyload.ca

2/ Replacement Parts & Installation Tools

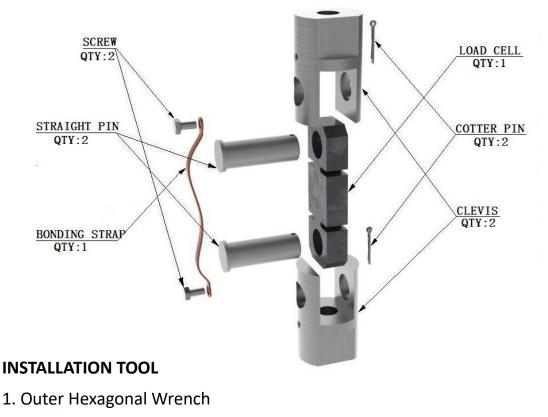

2. Plier

3/ Installation Steps

Step 1:

Put the load cell in one of the clevises, and insert the pin. Keep the load cell in the middle of clevis, do not brush with the clevis. As shown in the figure below.





Anyload Transducer Co. Ltd. Unit 18, 7228 Winston Street, Burnaby, B.C. V5A 2G9 Tel: +1 604 420 2130 Fax: +1 866 612 9088 Email:info@anyload.ca

Step 2:

Insert the cotter pin in the hole at the end of straight pin, and open the cotter pin with the plier. Keep the load cell in the middle of clevis, do not brush with the clevis . As shown in the figure below.



Notice:

The angle of Cotter pin is 60 °in principle.

The cotter pin must be okey at a time, cannot be used again and again.

Step 3:

Repeat step 1 and step 2. Install the second clevis to the other end of the load cell, on straight pins and cotter pin. As shown in the figure below.






Unit 18, 7228 Winston Street, Burnaby, B.C. V5A 2G9 Tel: +1 604 420 2130 Fax: +1 866 612 9088 Email:info@anyload.ca

Step 4:

Tighten the screws to install the bonding strap. As shown in the figure below.




4/ Integral Installation

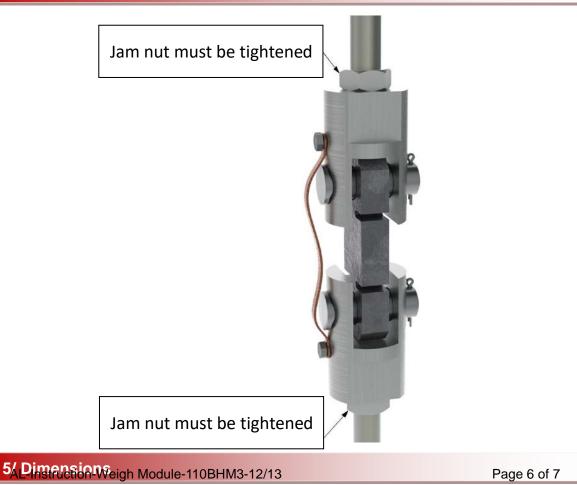



Unit 18, 7228 Winston Street, Burnaby, B.C. V5A 2G9 Tel: +1 604 420 2130 Fax: +1 866 612 9088 Email:info@anyload.ca

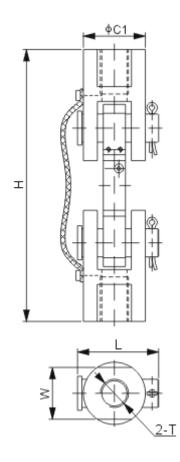

DATED	DIMENSIONS					
RATED Capacity	C1	H	L	w	т	SHIPPING Weight
kg/mm						
5001,000	35	125	46	27	1/2-20 UNF Depth20	0.5
2,000	45	184	57	35	3/4-16 UNF Depth30	1.2
5,000	65	216	77	52	1-14 UNS Depth30	3.5
10,000	85	296	98	55	1-1/2-12UNF Depth45	6.4
Ib/inches(conver	sion of ab	ove dimensi	ons)			
1102.3.2,202.6	1.38	4.92	1.81	1.06	1/2-20 UNF Depth0.79	1.10
4,405.3	1.77	7.24	2.24	1.38	3/4-16 UNF Depth1.18	2.65
11,013.2	2.56	8.50	3.03	2.05	1-14 UNS Depth1.18	7.72
22,026.4	3.35	11.65	3.86	2.16	1-1/2-12UNF Depth1.77	14.11