




# 363RSM1 Installation Instructions

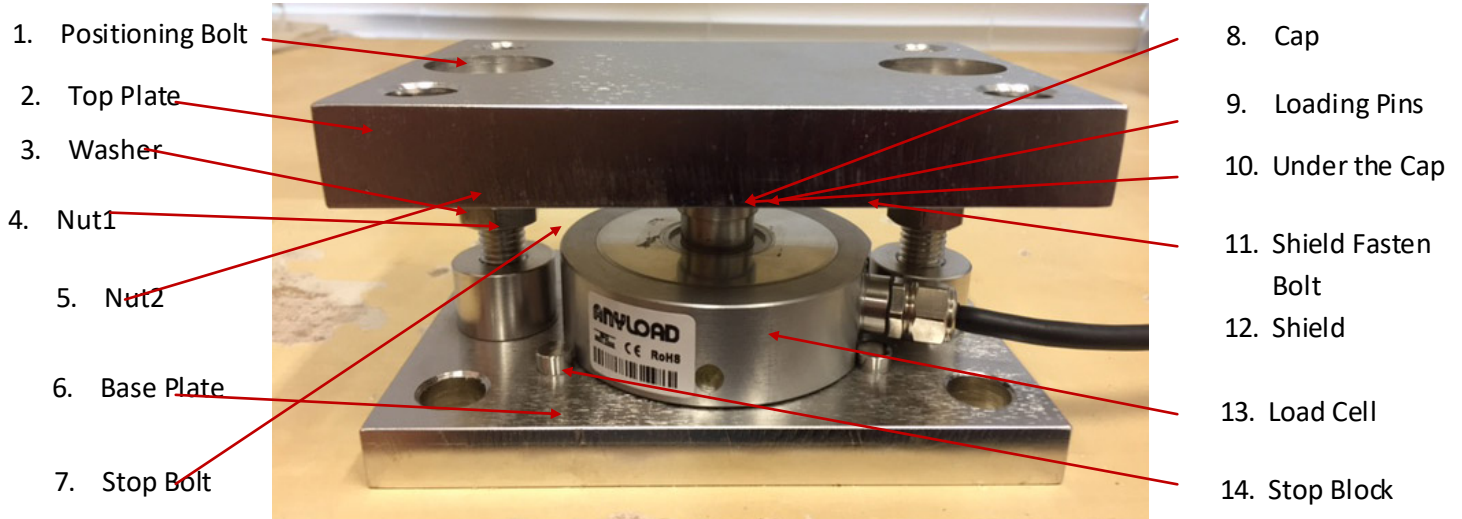


1. Remove the **Top Plate** ( Part # 2). Install the 363RS load cell in the **Base Plate** (Part #6). See photos below.

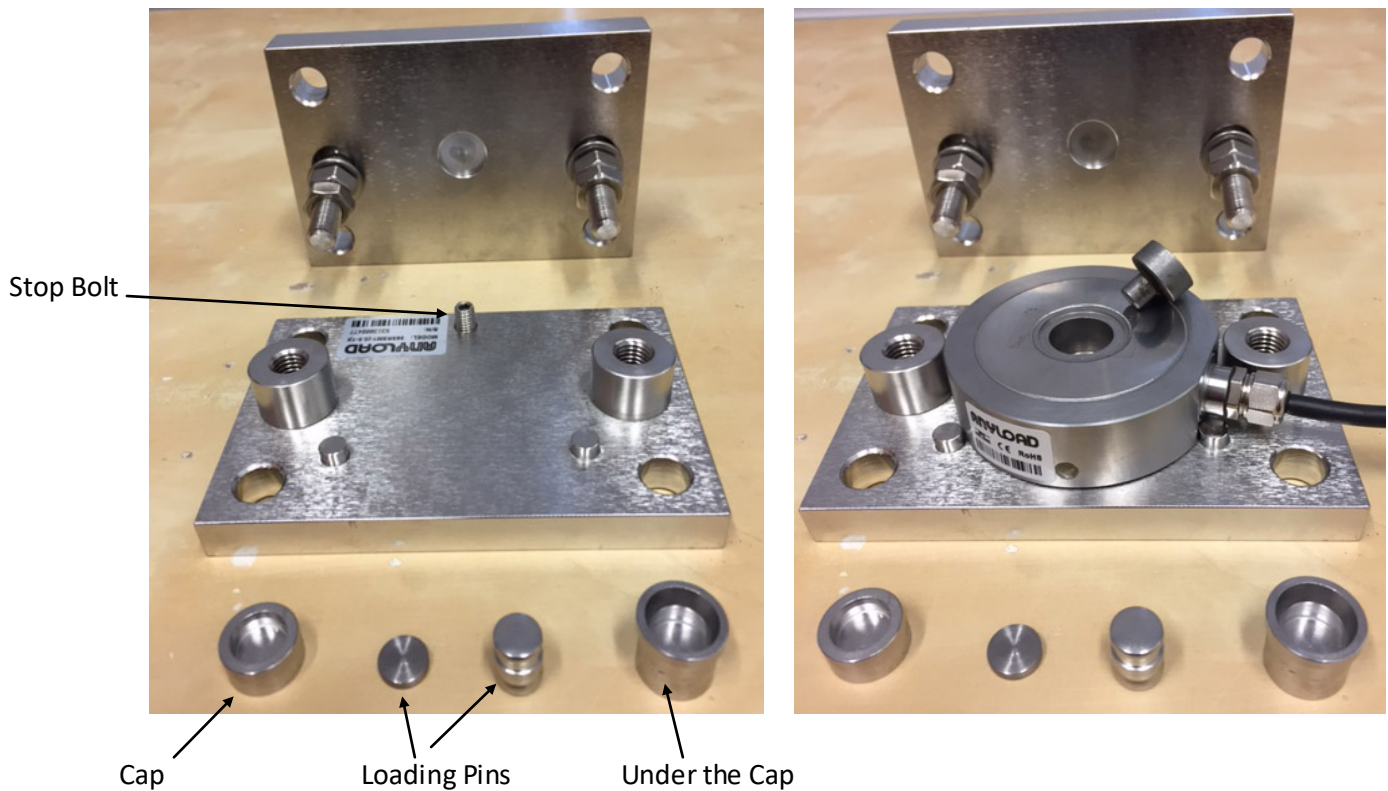

2. Assemble the **Loading Pins** ( Part #9) and put it on top of the 363RS Load Cell. See photos below.

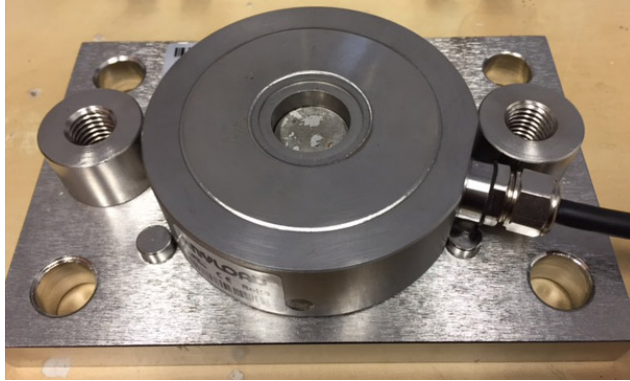

Assemble the loading pin with the caps in the above sequence. See photo below.

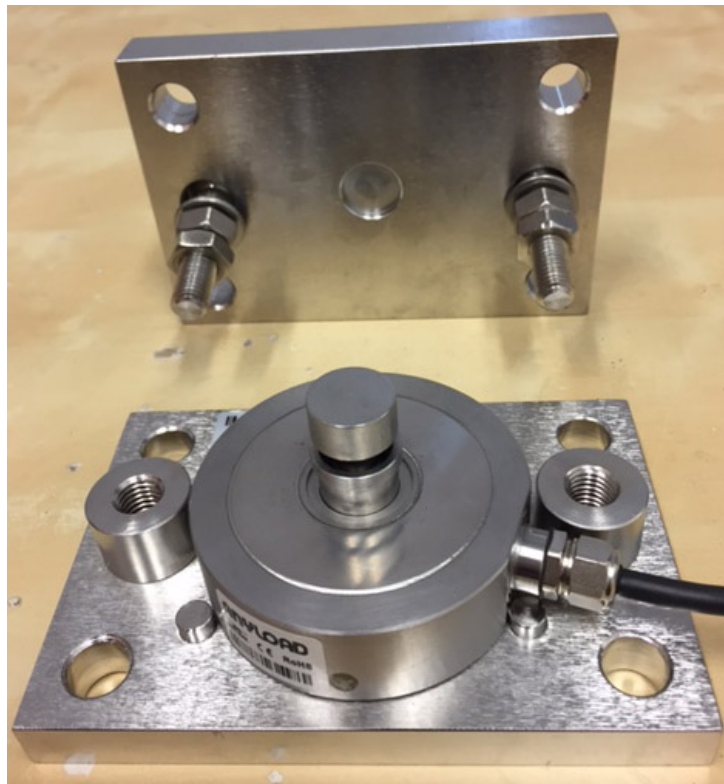

3. Install the **Top Plate** ( Part #2). Adjust the **Positioning Bolts** (Part#1), Nuts1 and Nuts2 (Part #4&5, respectively) to the desired tightness. Make sure the **Cap** (Part#8) is properly fitted in the hole under the Top Plate (see the photos below).

