

# ANYLOAD®

# 815BS

LCD INDUSTRIAL WEIGHING  
INDICATOR



## TECHNICAL MANUAL

Version 21.23

|           |                                   |           |
|-----------|-----------------------------------|-----------|
| <b>1.</b> | <b>Introduction .....</b>         | <b>2</b>  |
| 1.1       | Main Features .....               | 2         |
| 1.2       | Technical Specifications .....    | 3         |
| <b>2.</b> | <b>Installation .....</b>         | <b>4</b>  |
| 2.1       | Safety Precautions .....          | 4         |
| 2.2       | Main Enclosure .....              | 5         |
| 2.3       | Opening Enclosure .....           | 7         |
| 2.4       | Mounting Enclosure .....          | 7         |
| <b>3.</b> | <b>Wiring .....</b>               | <b>8</b>  |
| 3.1       | Controller Board Terminals .....  | 8         |
| 3.2       | Electrical Power Wiring .....     | 9         |
| 3.3       | Load Cell Wiring .....            | 10        |
| 3.4       | Serial Communication Wiring ..... | 11        |
| <b>4.</b> | <b>Configuration .....</b>        | <b>12</b> |
| 4.1       | Indicator Setup Menu .....        | 12        |
| 4.2       | Indicator Operating Modes .....   | 12        |
| 4.3       | Indicator Display Symbols .....   | 13        |
| 4.4       | Indicator Membrane Keypad .....   | 14        |
| 4.5       | F1 Formats .....                  | 18        |
| 4.6       | F2 Configuration .....            | 19        |
| 4.7       | F3 Calibration .....              | 20        |
| 4.8       | F4 Filtering .....                | 21        |
| 4.9       | F5 Communications .....           | 21        |
| 4.10      | F6 Auxiliaries .....              | 23        |
| 4.11      | F7 Utilities .....                | 24        |
| <b>5.</b> | <b>Calibration .....</b>          | <b>25</b> |
| 5.1       | Zero Calibration .....            | 26        |
| 5.2       | Span Calibration .....            | 26        |
| <b>6.</b> | <b>Sealing .....</b>              | <b>27</b> |
| 6.1       | Physical Sealing .....            | 27        |
| 6.2       | Electronic Sealing .....          | 27        |
| <b>7.</b> | <b>Auxiliaries .....</b>          | <b>28</b> |
| 7.1       | Peak Mode .....                   | 28        |
| 7.2       | Count Mode .....                  | 29        |
| 7.3       | Set Point .....                   | 30        |
| 7.4       | Serial Protocols .....            | 31        |
| 7.5       | Back Light .....                  | 31        |
| 7.6       | Ticket Printing .....             | 32        |
| <b>8.</b> | <b>Troubleshooting .....</b>      | <b>33</b> |
| 8.1       | Controller Board .....            | 33        |
| 8.2       | Error Codes .....                 | 34        |
| 8.3       | Jumper Setting .....              | 34        |
| 8.4       | Auxiliary Inputs .....            | 35        |
| 8.5       | Advance Diagnostic .....          | 36        |
| 8.6       | Battery Symbol .....              | 36        |

## I. ABOUT THIS MANUAL

Thank you for choosing Anyload 815BS industrial LCD weight Indicator. This 815BS technical manual provides installation, setup, operation, and configuration information for the 815BS industrial LCD Indicators. This manual is intended to be used by trained service technicians and installers. It is recommended to go through the manual in details before installing, operating, or configuring the instrument. For further information please contact Anyload Weigh & Measure Inc. authorized dealer.

## II. DISCLAIMER




Information in this Technical Manual is subject to change without notice due to correction or enhancement. The information described in this manual is the property of Anyload Weigh & Measure Inc. All other brand or product names within this publication are trademarks or registered trademarks of their respective companies. All information contained within this publication is, to the best of our knowledge, complete and accurate at the time of publication.

**ANYLOAD®** Is a registered trademark of Anyload Weigh & Measure Inc. Copyright © 2023 Anyload Weigh & Measure Inc. All rights reserved.

## III. SAFETY

Standard safety practices are required before conducting any installation, maintenance, or procedure on device. It is recommended to read and understand the instructions and warnings in this manual before performing any procedure on device. Failure to follow the instructions and warnings could result in injury or death.





Definition of the safety symbols is described in table below.

| Symbol  | Description   |
|---|---|
|  | <b><i>WARNING!</i></b><br>Indicates a potentially hazardous situation which may result in serious injury or death.<br>Indicates a potentially dangerous procedure which may cause injury or death |
|  | <b><i>CAUTION!</i></b><br>Indicates a potentially wrong procedure which may result in damage to device.<br>Indicates a potentially wrong procedure which may result in loss of warranty           |
|  | <b><i>NOTICE!</i></b><br>Indicates a procedure which may need more instructions.<br>Indicates a procedure which has more information available  |

# 1. INTRODUCTION

## 1.1 MAIN FEATURES

- Six digits 1.0" seven segments LCD industrial weight indicator.
- Standard seven segments with capability to display alphanumerical characters.
- Tri color back light in green, red, and amber colors.
- Indication of up to four units of lb, kg, oz, and g.
- Indication of gross, net, and tare.
- Indication of stability, and center of zero.
- Indication of auxiliary functions of peak mode, parts count, and set points.
- Up to one million internal counts accuracy with 24bits resolution.
- Auxiliary functions for peak mode, set point, and piece counting.
- Password protected setup and calibration menu.
- Physical and electronic sealing with audit trail function.
- Four or six wires load cells at 0-19mV.
- Up to eight 350R or sixteen 700R load cells with 5V excitation.
- Advance analogue, average, and digital filtering for better stability.
- Two independent RS232 port for streaming and printing.
- Standard desk mount bracket.
- Weatherproof stainless steel NEMA 4/IP65 enclosure.
- UL approved power supply.
- Built in battery with internal charger.
- Breather ventilation to avoid condensation inside enclosure.
- Designed and developed by Anyload Weigh & Measure Inc. in Canada.

| Item  | Approvals | Description  |
|---|-----------|--|
|  | UL/cUL    | Class II UL / cUL Approved Multi Sense Power Supply, LPS, CB, CE |
|  | NTEP      | NTEP USA Class III/IIL 10,000d                                   |
|  | MC        | Measurement Canada Class III/IIHD 10,000d/20,000d                |
|  | CE        | LVD and ECD 2014/35/EU and 2014/30/EU Directives                 |

## 1.2 TECHNICAL SPECIFICATIONS

The technical specifications of 815BS indicators are as follows:

| Item | Specification         | Description   |
|------|-----------------------|---|
| 1    | Display Digits        | 1.0" (25mm) height, 6 digits, 7 segments                            |
| 2    | Digit Segments        | LCD with green, red, or amber back lighting                         |
| 3    | Micro Controller      | 50MHz ARM Cortex M® processor                                       |
| 4    | Units Indication      | 4 units annunciators for lb, kg, oz, and g and optional Ton         |
| 5    | Status Indication     | 4 status annunciators for stability, center of zero, gross, and net |
| 6    | Membrane Keypad       | 6 keys domed membrane keypad with buzzer indication                 |
| 7    | Decimal Point         | 4 decimal point places  |
| 8    | Communication Ports   | 2 independent serial ports for RS232                                |
| 9    | Communication Baud    | 1200,2400,4800,9600,19200, 38400 baud rates                         |
| 10   | Excitation Voltage    | 5V to supply 8 X 350R or 16 X 700R load cells                       |
| 11   | Input Range           | 0-19mV  |
| 12   | Measurement Speed     | 10-80 samples / sec   |
| 13   | Internal Accuracy     | 1,000,000 internal counts with 24bits ADC                           |
| 14   | Internal Filtering    | 3 levels include analogue, digital, and display filtering           |
| 15   | Battery               | 7.4V / 10,000mAH internal battery with built in charger             |
| 16   | Main Enclosure        | Stainless steel NEMA 4 / IP65 weatherproof                          |
| 17   | Power Supply          | Input: 100-240VAC, 0.5A, 50/60Hz / Output: 12VDC, 2.0A, 25W         |
| 18   | Power Consumption     | 120VAC @ 0.1A / 12VDC @ 0.5A (10W AC / 5W DC) typical               |
| 19   | Operating Temperature | -10°F to 120°F (-10°C to 50°C)                                      |
| 20   | Operating Humidity    | 20%RH to 90%RH  |
| 21   | Enclosure Ventilation | GORE® breather vent to avoid condensation                           |
| 22   | Physical Dimensions   | 9.1" W X 7.4" H X 3.0" D (231mm X 188mm X 76mm) includes base       |
| 23   | Total Weight          | 2.5kg (5lb) main unit and base, approximately                       |
| 24   | Industry Approvals    | UL approved external universal wall adopter, LPS, CE                |
| 25   | Regulatory Approvals  | NTEP / MC approvals and CE marking                                  |

## 2. INSTALLATION




### 2.1 SAFETY PRECAUTIONS

Please practice safety before conducting any installation, maintenance, or procedure on device.

- ✓ The 815BS indicators are pre-wired AC/DC devices with multi sense voltage.
- ✓ It is necessary to practice safety checks before any installation or maintenance.
- ✓ Do not operate this device unless all instructions in this manual have been read.
- ✓ All installation and maintenance shall be conducted by trained service technicians.
- ✓ Avoid any alteration or changes to the device other than factory provided options.
- ✓ Disconnect power source before any installation or maintenance.
- ✓ Make sure proper grounding is provided at the site.
- ✓ Make sure device is properly grounded if custom wiring is provided.
- ✓ Make sure site structure can bear weight of the indicator.
- ✓ Make sure enough clearance is available around the device for accessibility.
- ✓ Make sure all warning signs are visible and not damaged or altered.
- ✓ Follow warning and caution notes in this manual.



NTEP: Class III/IIIL 10,000d  
Measurement Canada:  
Class III / IIILD  
10,000d/ 20,000d


| Symbol  | Description   |
|---|---|
|  | <b>WARNING!</b><br>Make sure the power source is disconnected before any installation.<br>Make sure the site has proper grounding   |
|  | <b>CAUTION!</b><br>Any unauthorized change or alteration in default wiring may void warranty.<br>Any installation and wiring must be handled by authorized personnel            |
|  | <b>NOTICE!</b><br>Refer to the local electrical code for the wiring color codes.<br>Refer to the installation section for instructions to how to access to the wiring terminals |


## 2.2 MAIN ENCLOSURE

The main enclosure of the 815BS is a stainless-steel metal enclosure protected by eight screws on the back for easy service. The enclosure is a weatherproof stainless steel with standard desk mount bracket included in the package. All internal parts are installed and mounted inside of the enclosure. An internal battery installed inside the enclosure on the cover.

To open the enclosure, there are eight screws located on the back cover to be opened.


The dimensions provided are determined in mm (inches).

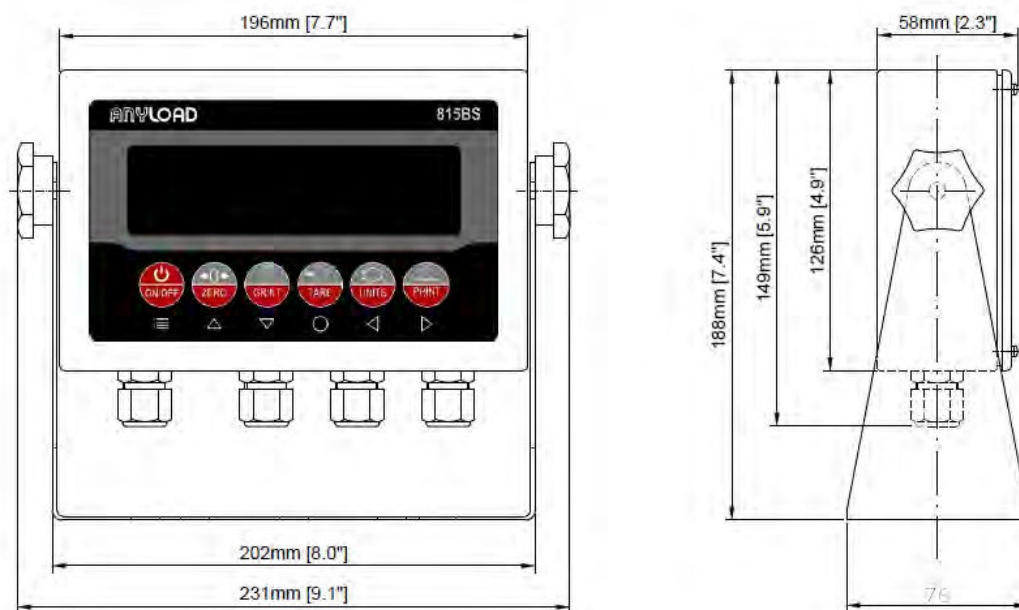

| Symbol  | Description  |
|---|--|
|  | <p><b>NOTICE!</b></p> <p>Make sure device is properly grounded if custom wiring is provided.</p> <p>Make sure site structure can bear weight of the indicator.</p> <p>Make sure enough clearance is available around the device for accessibility.</p> |



The 815BS indicators are consisted of following mechanical parts.

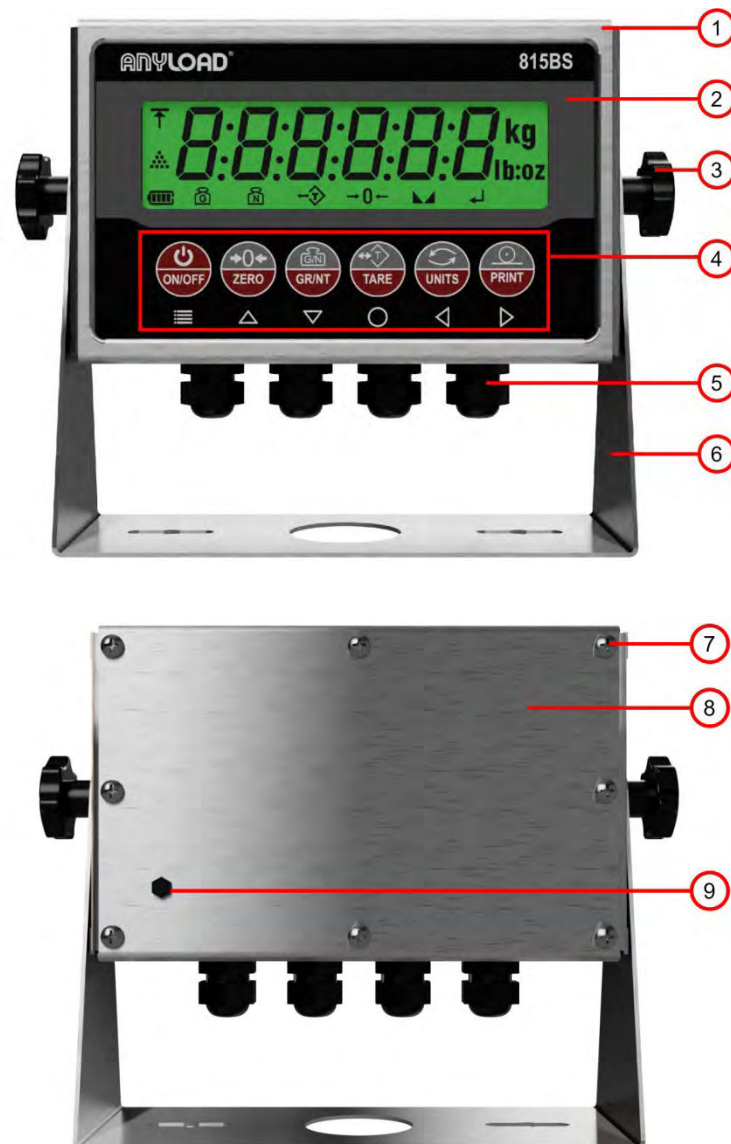


| Item | Title     | Description                              |
|------|-----------|--|
| 1    | Enclosure | Main body of stainless steel             |
| 2    | Display   | Seven segment displays with annunciators |
| 3    | Knob      | Two knobs on the side                    |
| 4    | Keypad    | Five buttons membrane keypad             |
| 5    | Gland     | Four strain reliefs for cables           |
| 6    | Base      | Mounting bracket                         |
| 7    | Seal      | Special screw for physical sealing       |
| 8    | Cover     | Back cover                               |
| 9    | Vent      | Breather ventilation                     |



## 2.3 OPENING ENCLOSURE

To open the 815BS cover, loosen eight screws on the back cover of the enclosure and flip down the back cover.

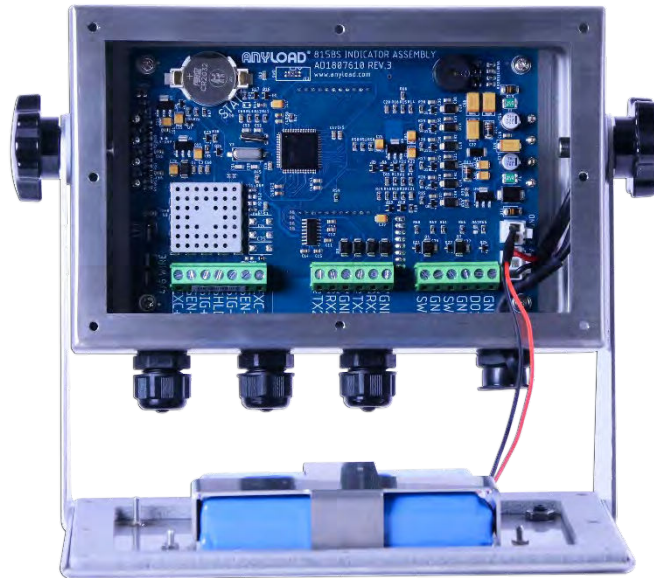

## 2.4 MOUNTING ENCLOSURE


The 815BS indicators may be mounted on the desk with standard desk mount bracket provided in the package.




### 3. WIRING

#### 3.1 CONTROLLER BOARD TERMINALS

All communication signals, and load cell inputs can be terminated to the controller board via accessible screw terminals. These terminals are designed to accept serial data communication signals, 4/6 wire load cell inputs, and two relay outputs.

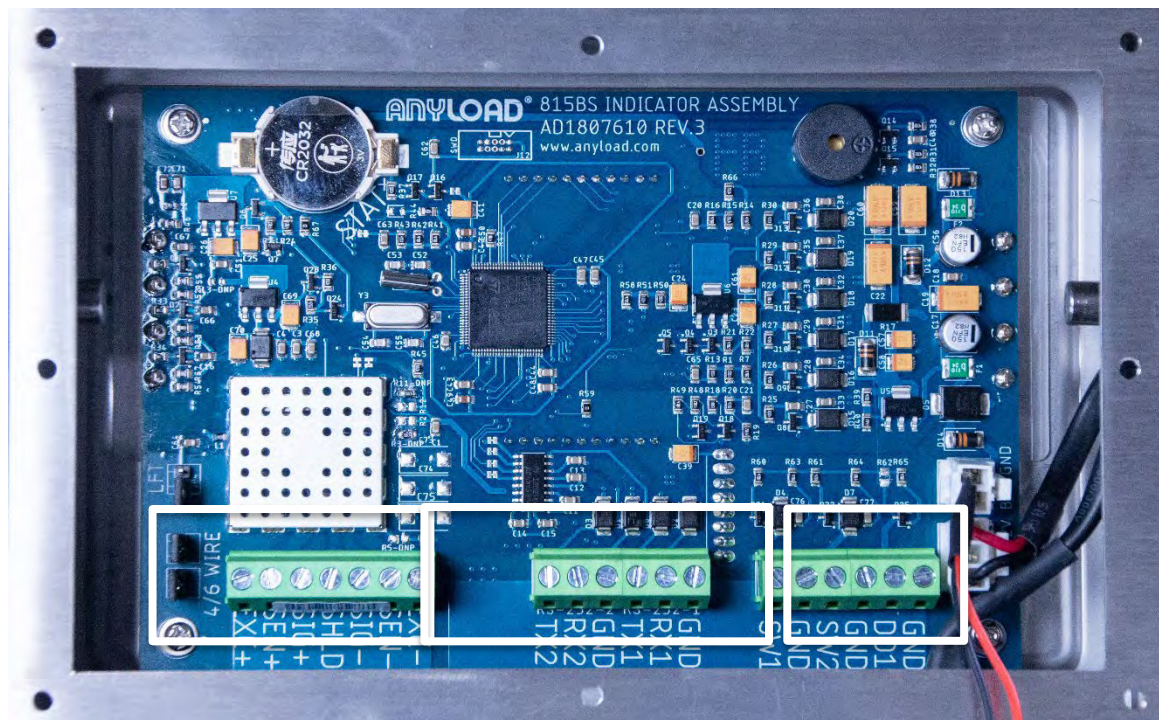



| Port | Terminal      | Description  |
|------|---------------|--|
| 1    | Load cell     | Can be connected to 4/6 wire load cells              |
| 2    | Communication | Two independent ports provide RS232-1, and RS232-2   |
| 3    | Digital I/O   | Two independent inputs and one open collector output |

| Symbol  | Description  |
|---|--|
|  | <p><b>NOTICE!</b></p> <p>Availability of the options is subject to confirmation by manufacturer and may vary by firmware version. Refer to the configuration section for instructions on how to configure the functions of indicator. Refer to the installation section for instructions on how to access the wiring terminals</p> |




### 3.2 ELECTRICAL POWER WIRING

The 815BS indicators are pre-wired AC devices with external UL approved wall adaptor installed via strain reliefs. The proper grounding is provided as default. The standard 815BS indicators have a ON / OFF power key to avoid internal battery drainage. Before any installations, make sure all power sources are disconnected. It is required to use a ground fault circuit interrupter to supply AC lines to the device at the site to avoid any risk or hazard. For the applications requiring custom wiring, all safety precautions and proper grounding must be considered. This table is based on color codes commonly used in North America. For other regions, the local codes must be obtained and observed.

The 815BS indicators also equipped with a re-chargeable internal lithium-ion battery. The battery is connected to the main board via a Bat connector. It is protected by an internal fuse to avoid any hazard. It is under regular charge by an internal charger via external wall adapter. The internal battery is a 10,000mAH lithium-ion re-chargeable battery. The 8156BS indicators can run in continuous operation on a fully charged battery for over 500 hours, considering to be connected to a single 700R load cell, and LCD back light off.

| Power Cord  |       | Power Supply |   |
|---|-------|--------------|---|
| Neutral   | White | Red          | 12V   |
| Live  | Black | Black        | GND   |
|  | Green | Yellow       |  |




| Item | AC Power Supply | Description                            |
|------|-----------------|--|
| 1    | Input           | AC 100-240V~ 0.5A 50-60HZ              |
| 2    | Output          | DC 12V 2A 25W                          |
| 3    | Enclosure       | Encapsulated IP67                      |
| 4    | Protection      | Short circuit, Overload, Over voltage  |
| 5    | Approval        | Class II UL / cUL approved, with CB CE |

| Symbol  | Description   |
|---|---|
|  | <b>WARNING!</b><br>Make sure the power source is disconnected before any installation.<br>Make sure the site has proper grounding   |
|  | <b>CAUTION!</b><br>Any unauthorized change or alteration in default wiring may void warranty.<br>Any installation and wiring must be handled by authorized personnel            |
|  | <b>NOTICE!</b><br>Refer to the local electrical code for the wiring color codes.<br>Refer to the installation section for instructions to how to access to the wiring terminals |

### 3.3 LOAD CELL WIRING

The 815BS indicators provide industry standard screw terminal ports with shield wire installation via screw terminals. The load cell wires coming from the cell to the indicator shall be entered to the unit via bottom strain reliefs and be terminated to the proper terminals. Both kinds of load cells with four and six wires can be connected to the indicator via load cell terminal. The 4/6 wire jumpers can be set accordingly based on the load cell type. For 4 wires load cells the jumpers must be closed. The load cell cable shield must be terminated to the shield terminal.

| Signals      | Loadcell     | Indicator   | Description                          |
|--------------|--------------|-------------|--------------------------------------|
| Positive     | Excitation+  | <b>EXC+</b> | Positive Excitation to the Load Cell |
|              | Sense +      | <b>SEN+</b> | Positive Sense to the Load Cell      |
|              | Signal +     | <b>SIG+</b> | Positive Signal from the Load cell   |
| Earth Ground | Shield       | <b>SHLD</b> | Load Cell Shield Wire                |
| Negative     | Signal -     | <b>SIG-</b> | Negative Signal from the Load Cell   |
|              | Sense -      | <b>SEN-</b> | Negative Sense to the Load Cell      |
|              | Excitation - | <b>EXC-</b> | Negative Excitation to the Load Cell |

| Symbol  | Description   |
|---|---|
|  | <b>WARNING!</b><br>Make sure the power source is disconnected before any installation.<br>Make sure the site has proper grounding and shielded earth wire   |
|  | <b>CAUTION!</b><br>Any unauthorized change or alteration in default wiring may void warranty.<br>Any installation and wiring must be handled by authorized personnel                                |
|  | <b>NOTICE!</b><br>Refer to the configuration section for instructions to how to calibrate the scale.<br>Refer to the installation section for instructions to how to access to the wiring terminals |




### 3.4 SERIAL COMMUNICATION WIRING

The 815BS indicators provide industry standard screw terminal ports with shield wire installation via screw terminals. The ports are automatically detected and adjusted upon start up. There are two communication ports available as RS232-1, and RS232-2. The serial communication wires coming to the indicator shall be entered to the unit via bottom strain reliefs and be terminated to the proper terminals.

The communication ports can be configured individually for different purposes such as streaming, and printing.

The communication ports can be terminated as follows:

| Communication           | Indicator  | Peripehral | Description                  |
|-------------------------|------------|------------|------------------------------|
| Protocol                | RS-232     | RS-232     | Function                     |
| RS-232-1 Streaming Port | <b>GND</b> | <b>GND</b> | Signal Ground                |
|                         | <b>RX1</b> | <b>TXD</b> | Streaming Port Receive Data  |
|                         | <b>TX1</b> | <b>RXD</b> | Streaming Port Transmit Data |
| RS-232-2 Printing Port  | <b>GND</b> | <b>GND</b> | Signal Ground                |
|                         | <b>RX2</b> | <b>TXD</b> | Printer Port Receive Data    |
|                         | <b>TX2</b> | <b>RXD</b> | Printer Port Transmit Data   |










| Symbol  | Description   |
|---|---|
|  | <b>WARNING!</b><br>The use of RS232 is limited to 15m(50ft)<br>Make sure the site has proper grounding  |
|  | <b>CAUTION!</b><br>Any unauthorized change or alteration in default wiring may void warranty.<br>Any installation and wiring must be handled by authorized personnel  |
|  | <b>NOTICE!</b><br>Refer to the configuration section F5 for instructions to how to configure inputs and outputs.<br>Refer to the installation section for instructions to how to access to the wiring terminals |



## 4. CONFIGURATION

### 4.1 INDICATOR SETUP MENU

The 815BS function setup menu is consisted of different function blocks used to set different configuration values of 815BS indicators. There are eight function blocks currently available for configuration showed in the table below. Entering the setup menu is protected by a password for legal for trade applications. Any changes in setup menu values will result incrementing the audit trail.

| Block   | Menu               | Description                              |
|---|--------------------|--|
|    | <b>FORMAT</b>      | Functions Related to Scale Formats       |
|    | <b>CONFIG</b>      | Functions Related to Scale Configuration |
|    | <b>CALIBRATION</b> | Functions Related to Scale Calibration   |
|    | <b>FILTERING</b>   | Functions Related to Scale Filtering     |
|   | <b>COMPORT</b>     | Functions Related to Communication Ports |
|  | <b>AUXILIARY</b>   | Functions Related to Auxiliary Functions |
|  | <b>UTILITIES</b>   | Functions Related to Utility Functions   |
|  | -                  | N/A                                      |
|  | <b>DIAGNOSTICS</b> | Advance Diagnostics                      |

### 4.2 INDICATOR OPERATING MODES


The 815BS indicators can be used in three different modes.

| Mode              | Description  |
|-------------------|--|
| <b>Weigh Mode</b> | Normal weight mode: Normal weighing in legal for trade or nonlegal for trade applications Refer to F1, F2, and F3 for calibration. |
| <b>Peak Mode</b>  | Peak mode function: Peak mode function in nonlegal for trade applications Refer to F6 for configuration.                           |
| <b>Count Mode</b> | Piece count function: Piece counting function for nonlegal for trade applications. Refer to F6 for configuration.                  |



### 4.3 INDICATOR DISPLAY SYMBOLS


The 815BS indicators provide twelve LCD annunciators for different functions and operation listed below.

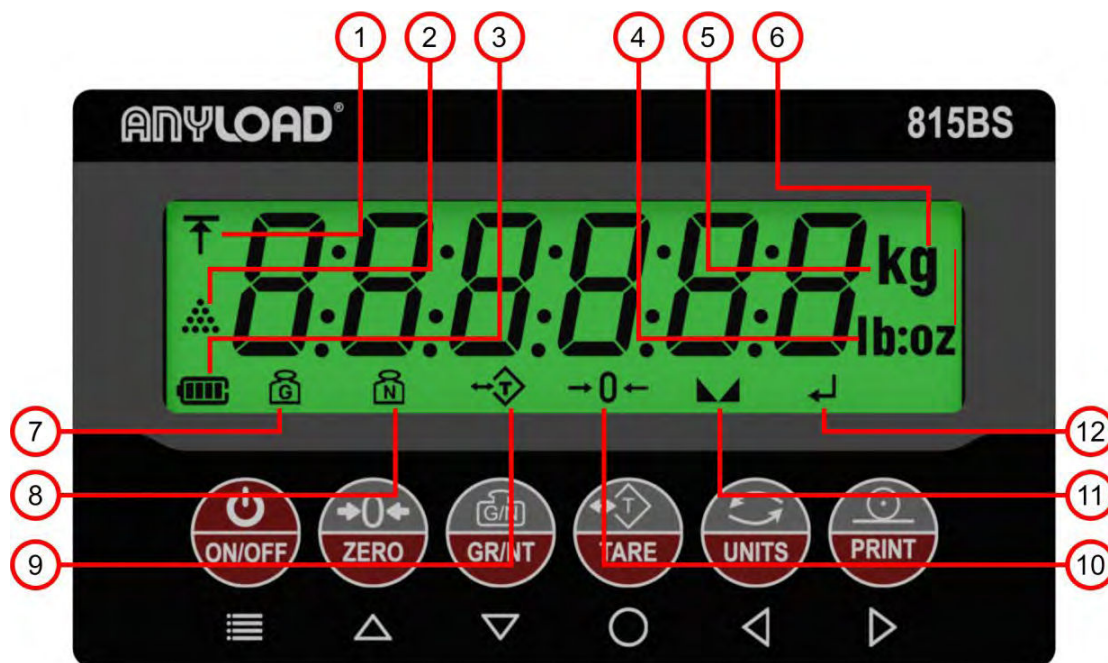

| Legend | LCD          | Function                | Description                              |
|--------|--------------|-------------------------|--|
| 1, 2   | PEAK / COUNT | Peak / Count Indication | Auxiliary functions blinking or solid    |
| 3      | BAT          | Battery indication      | Battery life indication full to empty    |
| 4      | lb           | lb unit indication      | Pounds                                   |
| 5      | kg / g       | kg / g unit indication  | Kilograms or Grams                       |
| 6      | oz           | oz unit indication      | Ounces                                   |
| 7      | GR           | Gross indication        | Gross weight is displayed                |
| 8      | NT           | Net indication          | Net weight is displayed                  |
| 9      | TR           | Tare indication         | Tare value is acquired                   |
| 10     | →0←          | Zero indication         | Center of zero                           |
| 11     | ▴▾           | Stability indication    | Scale reading is stable                  |
| 12     | ↩            | Set Point Indication    | Setpoint for different back light colors |

## 4.4 INDICATOR MEMBRANE KEYPAD


The 815BS setup menu is used to calibrate the scale and configure main operating functions of the 815BS indicators. A six keys membrane keypad, located at front panel of the enclosure, is used to provide basic functions of the indicator enter or exit from, and navigate through setup menu functions as well. The 815BS setup menu is protected by password and electronics sealing for Legal or Trade (LFT) applications.

To turn the indicator ON or OFF use long press  (Press and hold).

To enter setup menu, press and hold  &  keys together for two seconds.

To exit from setup menu, use the same keys combination.


To navigate through menus, press short or hold  or  keys (LEFT or RIGHT).

To enter or exit from a sub menu press  key (ENTER/ACCEPT).

To change a sub menu value, press  or  keys (UP or DOWN).





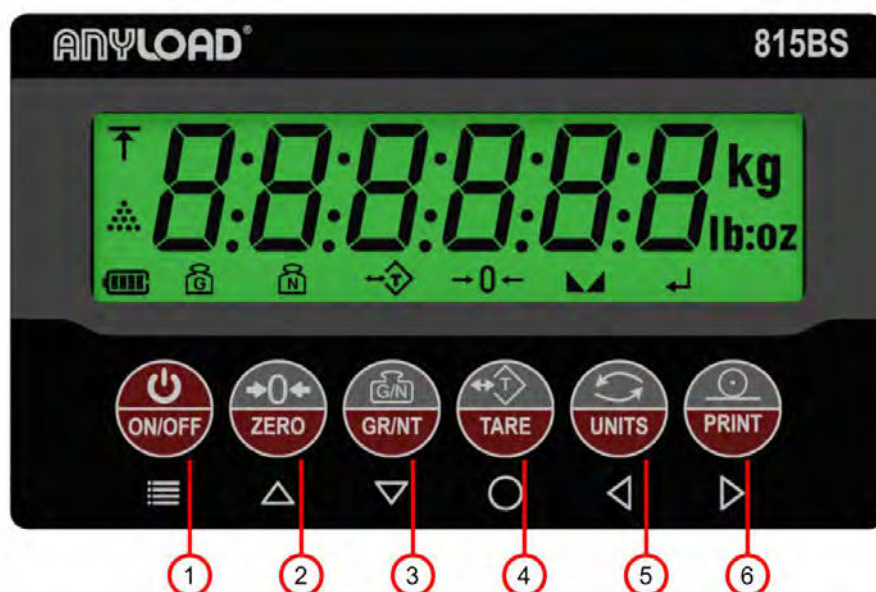












To change a value in an editor menu, press  or  keys (UP or DOWN).

To change a digit in an editor menu, press  or  keys (LEFT or RIGHT).











The 815BS keypad basic and alternative operations are listed in below table.

The keypad is used for basic functions, entering setup menu, entering audit function, and editing values.



| Keypad   | Primary              | Alternate   | Description   |
|--|----------------------|---|---|
|   | Zero                 | <br>Up   | Weight Mode: Zero Scale<br>Setup Menu: Change the value increasing.<br>Editor: Change the value increasing  |
|   | Gross / Net<br>Clear | <br>Down   | Weight Mode: Switch gross/net.<br>Long press clears tare.<br>Editor: Change the value decreasing  |
|   | Tare                 | <br>Enter  | Weight Mode: Tare Scale<br>Setup Menu: Enters a sub menu function.<br>Editor: Enter / Accept value  |
|    | Units<br>Clock       | <br>Left  | Weight Mode: Switches units. Long press set clock.<br>Setup Menu: LEFT navigation through F menu<br>Editor: Change the digit number to left   |
|   | Print                | <br>Right  | Weight Mode: Prints a string or ticket.<br>Setup Menu: RIGHT navigation through F menu<br>Editor: Change digit number to right  |
| <br> | N/A                  | <br><br>Enter / Exit<br>Setup | Pressing ZERO and TARE together will enter setup.<br>A password is required to enter the setup menu.<br>Use editor to enter password ( -0001- default)<br>Use same keys to exit from setup menu |
| <br> | N/A                  | <br><br>Enter Audit           | Pressing PRINT and TARE together will enter audit.<br>The audit trail switches between CFG and CAL<br>Display shows CFG.000 / CAL,000 momentarily.<br>Use GR/NT key to exit                     |


- ENTERING INTO SETUP MENU

Press and hold  &  keys together simultaneously for two seconds to enter setup menu, the SETUP message will appear. A password is required to enter into setup menu. Use  or  to change the value of the digit. Use  or  to change the digit to right or left. Press  when the correct password is entered. Then first function block F1.0 will be displayed.






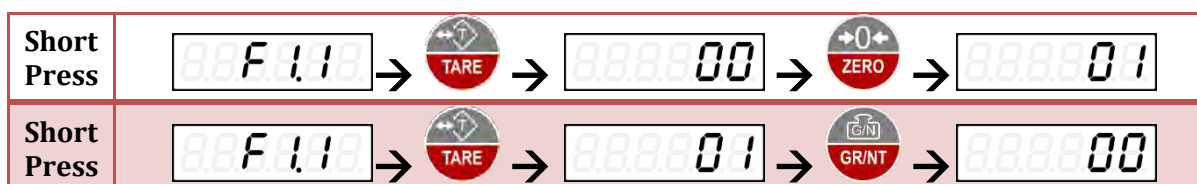
- NAVIGATING THROUGH MENU

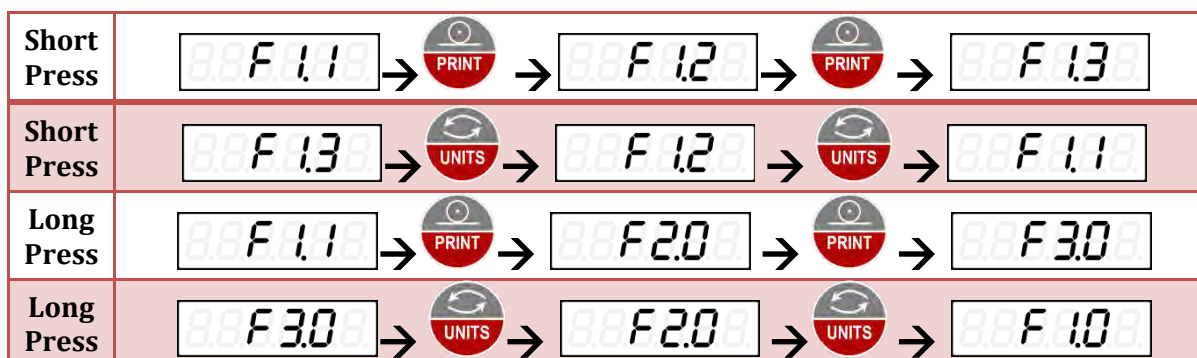To navigate through the menu, press  or  keys. A short press will cause FX.X to increase or decrease by 0.1 (move within the submenu) and a long press will increase or decrease by 1 (exit the submenu and go to the root menu).




- EDITING SUBMENU VALUES

Press  key to enter the shown submenu and the current setting of that submenu will be displayed. Press  or  keys to change the value of the submenu as required.





- *SETTING SUBMENU VALUE*

Press  key to accept the selected value and return to the submenu. A FX.X message showing corresponding function block will be displayed.









- *EXITING FROM SETUP MENU*

Press and hold  &  keys together simultaneously to save and exit the setup menu. A SAVED message will be displayed and then it will reset. To exit without saving, press and hold TARE button.









- *EDITING NUMERIC VALUE*

Press  key to enter the shown submenu and the current setting of that submenu. If a numeric value is displayed, use  or  to change value of the digit. Use  or  to change the digit to right or left. Press  when the desired value is entered.



- *CHANGING TIME DATE*

Press and hold  key to enter the time / date edit mode. This function is disabled as default. Use  or  to change the value of the digit. Use  or  to change the digit to right or left. Press  when the desired password is entered. Then first function block F1.0 will be displayed.

## 4.5 F1 FORMATS

Function related to divisions, decimals, units, and capacity formats of the scale.

| Function                 | Value  | Setting  | Description  |
|--------------------------|--|--|--|
| F1.1<br>Grad Size        | <b>1d</b><br>2d<br>5d<br>10d<br>20d<br>50d<br>100d<br>200d | <b>1d</b><br>2d<br>5d<br>10d<br>20d<br>50d<br>100d<br>200d | Scale divisions.<br>It sets the minimum display resolution.<br>To be set before calibration.   |
| F1.2<br>Decimal Point    | <b>None</b><br>0.0<br>0.00<br>0.000<br>0.0000              | <b>None</b><br>0.0<br>0.00<br>0.000<br>0.0000              | Scale decimals.<br>It sets the decimal points.<br>To be set before calibration.                |
| F1.3<br>Calibration Unit | <b>1</b><br>2  | <b>kg</b><br>lb  | Calibration Unit.<br>The unit is used to calibrate the scale.<br>To be set before calibration. |
| F1.4<br>Power up Unit    | <b>1</b><br>2<br>3<br>4                                    | <b>kg</b><br>lb<br>oz<br>g                                 | Power up primary unit.<br>Scale power up at this unit.   |
| F1.5<br>Alternative Unit | 0<br>1<br><b>2</b><br>3<br>4                               | None<br>kg<br><b>lb</b><br>oz<br>g                         | First alternate unit.  |
| F1.6<br>Alternative Unit | <b>0</b><br>1<br>2<br>3<br>4                               | <b>None</b><br>kg<br>lb<br>oz<br>g                         | Second alternate unit.   |
| F1.7<br>Capacity Setting | <b>005000</b><br>000001<br>100000                          | <b>005000</b><br>000001<br>100000                          | Scale capacity.<br>It sets the capacity of scale.<br>To be set before calibration.             |
| F1.8<br>Over Capacity    | 0d<br>1d<br><b>2d</b><br>9d<br>2pc                         | 0d<br>1d<br><b>2d</b><br>9d<br>2%                          | Over capacity.<br>It sets the overload based on capacity.<br>To be set before calibration.     |
| F1.9<br>Reserved         | AUdit<br>LFT   | Audit<br>LFT   | Audit is default to password protected.<br>LFT if sealed physically to use LFT switch.         |



## 4.6 F2 CONFIGURATION

Functions related to zero, stability, and tare configuration of the scale.

| Function                   | Value                                     | Setting                                   | Description   |
|----------------------------|---|---|---|
| F2.0<br>Zero Range         | <b>2pc</b><br>5pc<br>10pc<br>90pc         | <b>2%</b><br>5pc<br>10%<br>90%            | Zero range.<br>Scale can be zeroed within the range of set value.<br>It is set 2% for legal for trade applications  |
| F2.1<br>Zero Tracking      | Off<br><b>0.5d</b><br>1d<br>2d<br>3d      | Off<br><b>1/2d</b><br>1d<br>2d<br>3d      | Automatic zero tracking.<br>Scale maintains zero within the set division value.   |
| F2.2<br>Power up Zero      | <b>0</b><br>1                             | <b>Off</b><br>Active                      | Power up zero scale.<br>Scale attempt to zero on power up.  |
| F2.3<br>Stability          | Off<br><b>1d</b><br>2d<br>3d<br>5d<br>10d | Off<br><b>1d</b><br>2d<br>3d<br>5d<br>10d | Stability.<br>Scale maintains stability within the set division value.  |
| F2.4<br>Stability Timer    | <b>0.25-5.0</b>                           | 0.25-5.0s                                 | Stability timer. Each equal to 0.25 sec.<br>Scale returns to stability within the time set.   |
| F2.5<br>Unstable Blank     | <b>0</b><br>1                             | <b>Off</b><br>Active                      | Blank Weight.<br>Scale blanks display if the weight is not stable.  |
| F2.6<br>Tare<br>Regulation | 0<br>1<br><b>2</b><br>3                   | None<br>CAN<br><b>NTEP</b><br>OIML        | Tare Regulations.<br>NONE:<br>Tare can be acquired on any positive weight > 0.<br>Tare can be cleared at any time.<br>NTEP / US:<br>Tare can be acquired on any positive weight > 0.<br>Tare can only be cleared in gross mode at zero.<br>CAN / Measurement Canada:<br>Tare can be acquired only in gross mode weight > 0.<br>Tare can only be cleared in gross mode at zero.<br>OIML / EU:<br>Tare can be acquired on any positive weight > 0.<br>Tare only can be cleared in gross mode at zero. |
| F2.7<br>Tare Lock          | <b>0</b><br>1                             | <b>Off</b><br>No Tare                     | Tare lock.<br>Tare button is disabled if set.   |
| F2.8<br>Tare Auto          | <b>0</b><br>1                             | <b>Off</b><br>1                           | Auto Tare.<br>Acquires tare on positive weight values automatically.  |
| F2.9<br>Clear Auto         | <b>0</b><br>1                             | <b>Off</b><br>1                           | Auto Clear.<br>Clears tare automatically when scale is at zero.   |

## 4.7 F3 CALIBRATION

Functions related to zero and span calibration of the scale. **Use this with caution!**

| Function                 | Value               | Setting   | Description  |
|--------------------------|---------------------|---|--|
| F3.0<br>Local gravity    | Gravity             | Off<br>Set  | If SET, gravity compensation is in effect.<br>Local gravity to be entered.   |
| F3.1<br>Zero Scale       | Zero<br>Calibration | DEAD<br> <br>CLEAR<br>SCALE<br> <br>-CAL9-<br> <br>DONE               | Prompts CLEAR SCALE.<br><br>Clear the scale.<br>Press Enter to dead load scale if desired.<br>Press Left if want to abort the operation.<br><br>Prompts DONE after successful operation.<br><b>! Section 5 CALIBRATION for more details.</b>   |
| F3.2<br>Span Scale       | Span<br>Calibration | SPAN<br> <br>LOAD<br>SCALE<br> <br>005000<br> <br>-CAL9-<br> <br>DONE | Prompts LOAD SCALE.<br><br>Load scale with test wait and enter value.<br>Press Left if want to abort the operation.<br>Press Enter to span scale if desired.<br>Use editor menu to enter proper test weight value.<br>Press Enter to span scale.<br><br>Prompts DONE after successful operation.<br><b>! Section 5 CALIBRATION for more details.</b> |
| F3.3<br>Gravity          | Gravity             |   | If F3.0 SET, then destination gravity to be entered.   |
| F3.4<br>Adc Count        | A to D              | N/A   | Displays A/D raw count.  |
| F3.5<br>Span Edit        | 000000              | 000000  | Displays current span value to be edited if desired.<br><b>! Use this with caution. It changes span value.</b>   |
| F3.6<br>Password<br>Edit | -0001-              | -0001-  | Edit or change current password.<br>Use editor to change value / digit.<br><b>! Use this with caution. It changes setup password.</b>  |
| F3.7<br>Factory Reset    | -0001-              | -0001-  | Asks for password to reset to factory default values.<br>Use editor to enter current password.<br><b>! Use this with caution. It resets all calibration values.</b>  |
| F3.8<br>Send             |                     | N/A   | For service use only.  |
| F3.9<br>Receive          |                     | N/A   | For service use only.  |

## 4.8 F4 FILTERING

Functions related to the filtering.

| Function                 | Value                                 | Setting   | Description   |
|--------------------------|---------------------------------------|---|---|
| F4.0<br>Filter Preset    | 1<br>2<br><b>3</b><br>4<br>5          | Light<br>2<br><b>Medium</b><br>4<br>Heavy               | Filter preset.<br>It will set all filters accordingly for the best stability.<br>It starts with light filtering, ends to the heavy filtering. |
| F4.1<br>Digital Filter   | 0.5<br>1.0<br>2.0<br>3.0              | Heavy<br>1<br>2<br>Light                                | Digital Filter.<br>Heavy to light.  |
| F4.2<br>Average Filter   | 10<br>50<br>75<br>100<br>150<br>200   | Light<br>1<br>2<br>3<br>4<br>Heavy                      | Average Filter.   |
| F4.3<br>Filter Threshold | 2<br>4<br>8<br>12<br>14<br>18         | 2<br>4<br>8<br>12<br>14<br>18                           | Filter threshold division for the Scale fast response.<br>Higher the number, slower the response.   |
| F4.4<br>Filter Sense     | 2<br>5<br>8<br>10<br>12<br>15         | 2<br>5<br>8<br>10<br>12<br>15                           | Filter sensitivity samples for the scale fast response.<br>Higher the number, less the sensitivity.   |
| F4.5<br>Display Filter   | 0<br><b>0.25</b><br>0.50<br>0.75<br>1 | Fast<br><b>0.25 sec</b><br>0.50 sec<br>0.75 sec<br>Slow | Display Filter.<br>It sets display update rate in seconds.  |
| F4.6<br>Startup Count    | 0<br>1                                | 0<br>1  | Startup count down enabled as default.<br>Disabled If set to 1.   |

## 4.9 F5 COMMUNICATIONS

Functions related to the serial communication ports.

| Function                   | Value   | Setting   | Description   |
|----------------------------|---|---|---|
| F5.0<br>Port1 Baud<br>Rate | 1200<br>2400<br>4800<br><b>9600</b><br>19600<br>38400 | 1200<br>2400<br>4800<br><b>9600</b><br>19600<br>38400 | RS232-1 baud rate setting   |
| F5.1<br>Port1 Data Bit     | <b>8-None</b><br>7-Even<br>7-Odd                      | <b>8-None</b><br>7-Even<br>7-Odd                      | RS232-1 data bits   |
| F5.2<br>Port1 Mode         | 0-5<br><b>0</b>                                       | 0-5<br><b>Stream</b>                                  | RS232-1 mode selection<br>0 streaming standard string<br>1 send out weight with PRINT key.<br>2 send out a simple ticket with PRINT key.<br>3 N/A<br>4 send out weight if scale is stable with PRINT key.<br>5 port is off. |
| F5.3<br>Port2 Baud         | <b>9600</b>   | <b>9600</b>   | RS232-2 baud rate setting<br>Same as RS232-1  |
| F5.4<br>Port2 Data Bit     | <b>8-None</b>   | <b>8-None</b>   | RS232-2 data bits<br>Same as RS232-1  |
| F5.5<br>Port2 Mode         | 0-5<br><b>1</b>                                       | 0-5<br><b>Print</b>                                   | RS232-2 mode selection<br>Same as RS232-1   |
| F5.6<br>Emulation          | 0-10  | 0-10  | Stream emulation.<br>Default is Anyload string.   |
| F5.7<br>Input One          | 0-9   | 0-9   | Default is Off.<br>1-9 = ZTCGNKUP respectively to assign DI1 dry contact.   |
| F5.8<br>Input Two          | 0-9   | 0-9   | Default is Off.<br>1-9 = ZTCGNKUP respectively to assign DI2 dry contact.   |
| F5.9<br>Stream Delay       | 0<br><b>0.25</b><br>0.50<br>0.75<br>1                 | 0<br><b>0.25s</b><br>0.50s<br>0.75s<br>1s             | Universal streaming delays for all ports in seconds.<br>It sets the time delay between each streaming string.   |

## 4.10 F6 AUXILIARIES

Functions related to peak, count, and relay auxiliary functions.


| Function                 | Value   | Setting   | Description  |
|--------------------------|---|---|--|
| F6.0<br>Peak Mode        | 0<br>1  | Off<br>On   | Peak mode activation<br><br><b>! See Section 7 AUXILIARIES for more detail.</b>  |
| F6.1<br>Peak Value       | 000000  | 000000  | Peak mode threshold  |
| F6.2<br>Peak Reset       | 0<br>1  | Off<br>On   | Peak mode automatic reset  |
| F6.3<br>Peak Delay       | 0-5.0<br>0  | 0-5.0s  | Peak mode automatic reset delay in seconds.  |
| F6.4<br>Count Mode       | 0<br>1  | Off<br>On   | Piece count mode activation<br><br><b>! See Section 7 AUXILIARIES for more detail.</b>   |
| F6.5<br>Count<br>Average | Put 2<br><b>Put 5</b><br>Put 10<br>Put 20<br>Put 50<br>Put 100<br>Put 200 | Put 2<br><b>Put 5</b><br>Put 10<br>Put 20<br>Put 50<br>Put 100<br>Put 200 | Establishes the average piece weight.<br>The editor asks to enter the number of pieces.<br>After adjusting numbers to desired value,<br>Put number of pieces on scale and take average weight.<br>Average weight will be stored for piece count mode.<br><br>If F6.4 is off, it shows Count Off. |
| F6.6<br>Set Point        | 0<br>1  | Off<br>On   | Set point function activation.<br>It uses green, red, and amber back lighting.<br><b>! See Section 7 AUXILIARIES for more detail.</b>  |
| F6.7<br>Set Point 1      | 000000  | 000000  | Set point 1 threshold.<br>Use editor to set the SP1 value and DO1.   |
| F6.8<br>Set Point 2      | 000000  | 000000  | Set point 1 threshold.<br>Use editor to set SP2 value and DO1.   |
| F6.9<br>Buzzer           | 0<br>1<br>2   | Off<br><b>Key</b><br>Set  | The keypad buzzer can be set on or off.<br>If set to 2, it operates respectively with setpoints.   |




## 4.11 F7 UTILITIES

Functions related to auto timers' utility functions.

| Function                     | Value  | Setting   | Description  |
|------------------------------|--|---|--|
| F7.0<br>On Off Auto<br>Timer | <b>Off</b><br>2.0<br>5.0<br>10.0<br>30.0<br>60.0 | <b>Off</b><br>2.0min<br>5.0min<br>10.0min<br>30.0min<br>60.0min | Off: the auto timer will be off, and indicator remains on.<br>Auto timer can be set in minutes to a maximum of 60 minutes.<br>The indicator will be turned automatically off after the time is over. |
| F7.1<br>Back Light<br>Timer  | Off<br>2.0<br><b>5.0</b><br>10.0<br>30.0<br>60.0 | Off<br>2.0s<br><b>5.0s</b><br>10.0s<br>30.0s<br>60.0s           | Off: the auto timer will be off and back light remains on.<br>Auto timer can be set in seconds to a maximum 60 seconds.<br>The back light will be automatically off after the time is over.          |
| F7.2<br>Back Light<br>Color  | None<br><b>GrEEEn</b><br>rEd<br>yELLO            | Off<br><b>Green</b><br>Red<br>Amber                             | Off: no back light<br>The back light colors in green, red, or amber.<br>The colors are controlled automatically in set points.   |



Use  to return to the weigh mode in calibration.

| Symbol  | Description  |
|---|--|
|  | <b>WARNING!</b><br>For proper wiring of the load cell refer to wiring section<br>For 4/6 wire load cells the jumpers must be set accordingly on the main board                                 |
|  | <b>CAUTION!</b><br>The setup menu is protected by password for legal for trade applications<br>The audit trail function CAL, CFG increments by one every time a calibration is performed       |
|  | <b>NOTICE!</b><br>For legal for trade applications the LFT jumper on main board must be open.<br>Refer to the F1, F2, and F3 for instructions to how to configure the scale before calibration |






## 5. CALIBRATION

The 815BS indicators utilize a reliable two point's calibration called dead load (zero calibration), and span scale (span calibration). The calibration is done through two simple sub menus inside the setup menu. The setup menu is protected by a password for the legal for trade applications. The audit trail function also is available to record the calibration and configuration changes.


| Function           | Value               | Setting  | Description  |
|--------------------|---------------------|--|--|
| F3.1<br>Zero Scale | Zero<br>Calibration | DEAD<br> <br>CLEAR<br>SCALE<br> <br>CAL 9<br> <br>DONE               | Prompts DEAD / CLEAR - SCALE.<br><br>Clear the scale.<br>Press Enter to dead load scale if desired.<br>Press Left if want to abort the operation.<br><br>Prompts DONE after successful operation.  |
| F3.2<br>Span Scale | Span<br>Calibration | SPAN<br> <br>LOAD<br>SCALE<br> <br>005000<br> <br>CAL 9<br> <br>DONE | Prompts SPAN / LOAD - SCALE.<br><br>Load scale with test weight and enter value.<br>Press Left if want to abort the operation.<br>Press Enter to span scale if desired.<br>Use editor menu to enter test weight value.<br>Press Enter to span scale.<br><br>Prompts DONE after successful operation. |



Use  to abort function before is executed.

| Symbol  | Description  |
|---|--|
|  | <b>WARNING!</b><br><br>For proper wiring of the load cell refer to wiring section<br>For 4/6 wire load cells the jumpers must be set accordingly on the main board                                 |
|  | <b>CAUTION!</b><br><br>The setup menu is protected by password for legal for trade applications<br>The audit trail function CAL, CFG increments by one every time a calibration is performed       |
|  | <b>NOTICE!</b><br><br>For legal for trade applications the LFT jumper on main board must be open.<br>Refer to the F1, F2, and F3 for instructions to how to configure the scale before calibration |

Before performing calibration, all functions related to F1 FORMAT, and F2 CONFIG inside the setup menu may be set accordingly or left at default values. It is recommended to navigate

through F1, and F2 functions before any calibration. Use  for ENTER / ACCEPT.


## 5.1 ZERO CALIBRATION

1. Navigate to F3.1 inside setup menu, and press Enter

2. Display shows



3. Clear the scale platform and press Enter

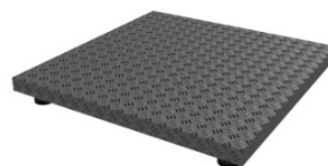

4. Display counts down to zero calibration
5. Display shows DONE at the end.



## 5.2 SPAN CALIBRATION

1. Navigate to F3.2 inside setup menu, and press Enter

2. Display shows



3. Load the scale with the test weight, and press Enter




4. Display shows the default test weight value to be edited



5. Using the editor keys, enter desired test weight value and press Enter




6. Display counts down to span calibration
7. Display shows DONE at the end.
8. The calibrated weight is displayed with a blinking C, indicating inside the setup menu.



## 6. SEALING



### 6.1 PHYSICAL SEALING

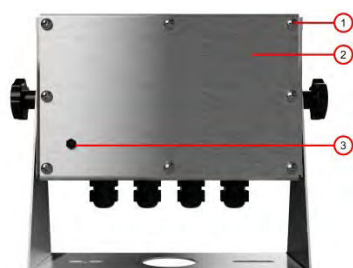
The 815BS indicator can be sealed physically by two special screws provided on the back cover. It can be used as complementary to electronic sealing. The LFT jumper on main board also must be kept open for legal for trade application for password protection of the setup menu.



### 6.2 ELECTRONIC SEALING

The 815BS indicators setup menu is protected by the password. The 815BS indicators therefore can be sealed electronically by using audit trail function. The audit trail can be accessed from front keypad as follows:

Press and hold  &  keys together simultaneously for two seconds to enter audit trail function, the AUDIT message will appear. Then CAL / CFG momentarily will be displayed.



CAL: Increments by one every time a calibration F3 is performed


CAL.001

CFG: Increments by one every time a change in F1, F2, or F3 is performed

CFG.001

Use  CLEAR to exit from audit trail function.

The LFT jumper header on main board must be open in legal for trade applications.

| Symbol  | Description  |
|---|--|
|  | <p><b>NOTICE!</b></p> <p>The indicator is protected by password to enter into setup menu<br/> Make sure the password is recorded somewhere safe in case is needed<br/> The CAL/CFG is activated in factory. Therefore, it may not be set to 1 as default</p> |

## 7. AUXILIARIES

### 7.1 PEAK MODE

The 815BS can be used to detect and establish peak weights using peak mode. The peak mode can be activated inside setup menu. The peak mode has a threshold value that must be set inside setup menu. There is option of the automatic peak and clear as described in the menu.


An LCD symbol on the front panel is used to display and identify peak mode operation.


| Function                  | Value      | Setting     | Description  |
|---------------------------|------------|-------------|--|
| F6.0<br>Peak Mode         | 0<br>1     | 0<br>1      | Peak mode activation                                       |
| F6.1<br>Peak<br>Threshold | 000000     | 000000      | Peak threshed value  |
| F6.2<br>Peak Auto         | 0<br>1     | 0<br>1      | Peak automatic clear                                       |
| F6.3<br>Peak Delay        | 0-5.0<br>0 | 0-5.0s<br>0 | Peak auto clear delay<br>Each increment equals to 0.25 sec |

The PEAK annunciator operates based on below table if the function is enabled.

| LCD  | Function           | Description                                |
|------|--------------------|--|
| PEAK | Solid              | The peak weight is established             |
| PEAK | Blinking ½ Seconds | Normal weigh mode with peak mode activated |
| PEAK | Off                | The peak mode is off                       |




Use  CLEAR long press to clear established peak weight.


| Symbol  | Description   |
|---|---|
|  | <p><b>NOTICE!</b></p> <p>Use GR/NT key long press clears the peak weight<br/>The peak mode only used for none legal for trade applications.<br/>The minimum peak division is 1d</p> |

## 7.2 COUNT MODE

The 815BS indicators utilize a piece counting mode to count number of pieces based on average weight of the piece established in setup menu.
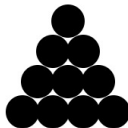
| Function              | Value   | Setting   | Description  |
|-----------------------|---|---|--|
| F6.4<br>Count Mode    | <b>0</b><br>1   | <b>Disabled</b><br>Enabled  | If set to 0, the piece count is off.<br>If set to 1, the piece count is enabled.   |
| F6.5<br>Count Average | <b>Put 2</b><br>Put 5<br>Put 10<br>Put 20<br>Put 50<br>Put 100<br>Put 200 | <b>Put 2</b><br>Put 5<br>Put 10<br>Put 20<br>Put 50<br>Put 100<br>Put 200 | Load Pieces on the scale.<br>Select desired number of pieces.<br>Press Enter to establish the average piece weight.<br>If the function is disabled it displays COUNT OFF.<br><br> |




In normal weight mode, use  key to switch between weight and count mode.

If in COUNT mode, the communication port also will switch to PC mode and sends out the count.

The COUNT annunciator operates based on below table.

| LCD   | Function           | Description                                   |
|-------|--------------------|---|
| COUNT | Solid              | Function is enabled. Piece count is displayed |
| COUNT | Blinking ½ Seconds | Function is enabled. Weight is displayed      |
| COUNT | Off                | Function is disabled in setup menu.           |

| Symbol  | Description   |
|---|---|
|  | <p><b>NOTICE!</b></p> <p>Use UNIT key to switch between piece count and weight mode<br/> The piece count is only available in primary calibrated unit for none legal for trade applications<br/> The minimum count division is 1d</p> |

### 7.3 SET POINT

The 815BS indicators utilize a dual set point function mode to perform different applications such as simple check weighing using different back light colors. The two set point values which indicate the threshold weight can be set inside the setup menu. The RED, GREEN, and AMBER back light then will function accordingly.

| Function            | Value  | Setting             | Controlled by Commands  |
|---------------------|--------|---------------------|---|
| F6.6<br>Set Point   | 0<br>1 | Disabled<br>Enabled | Set point function can be enabled or disabled.<br>It also enables DO1 for output. |
| F6.7<br>Set Point 1 | 000000 | 000000              | Edit set point 1 to control lower set point RED                                   |
| F6.8<br>Set Point 2 | 000000 | 000000              | Edit set point 2 to control higher set point AMBER                                |



RED, Limit Over SP2




GREEN, Between SP1 and SP2



AMBER, Limit Under SP1


| LCD | Function | Description  |
|-----|----------|--|
| SET | Red      | The weight value is greater than SP2. $W > SP2$                |
| SET | Green    | The weight value is between SP1 and SP2. $SP1 < W < SP2$ (DO1) |
| SET | Amber    | The weight value is less than SP1. $W < SP1$                   |

| Symbol  | Description  |
|---|--|
|  | <p><b>NOTICE!</b></p> <p>The set point function can be used to activate a check weighing annunciator via DO1 or buzzer..<br/>The minimum threshold weight division is 1d</p> |



## 7.4 SERIAL PROTOCOLS

The standard string format to be transmitted by RS232-1 and RS232-2 of 815BS indicator includes start of the text character, weight numeric values, unit character, status character, and end of the text character. An example of string protocol for single remote display application connected to an indicator is illustrated below.

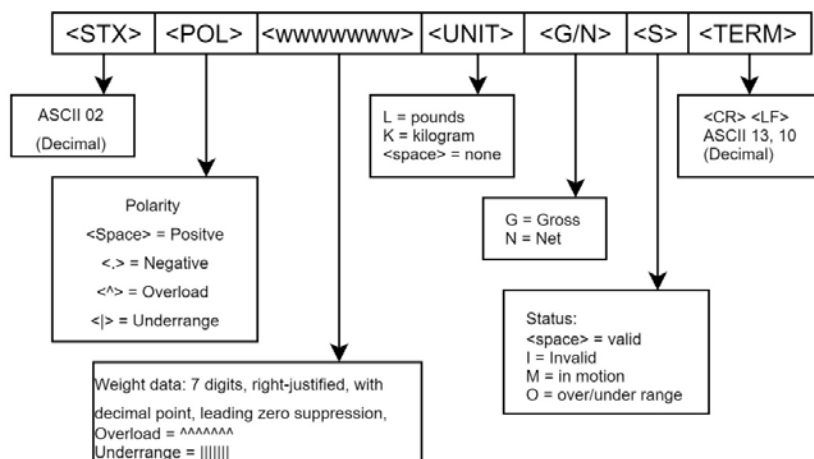

## 7.5 BACK LIGHT

The 815BS indicators can be set to three different colors for back lighting in the normal weight mode. The function can be set inside setup menu. When the set point is activated, the back light is automatically set by set points. If the back light is set to OFF, it always remains off. The back light is set to AMBER when inside the setup menu.

| Function                    | Value  | Setting   | Controlled by Commands   |
|-----------------------------|--|---|--|
| F7.1<br>Back Light<br>Timer | Off<br>2.0<br><b>5.0</b><br>10.0<br>30.0<br>60.0 | Off<br>2.0s<br><b>5.0s</b><br>10.0s<br>30.0s<br>60.0s | Off: auto timer will be off and back light remains on.<br>Auto timer can be set in seconds to a maximum 60sec.<br>The back light will be off after the time is over. |
| F7.2<br>Back Light<br>Color | None<br><b>GrEEn</b><br>rEd<br>yELLo             | Off<br><b>Green</b><br>Red<br>Amber                   | Off: no back light<br>The back light colors in green, red, or amber.<br>The colors are controlled automatically in set points.                                       |



## 7.6 TICKET PRINTING

The 815BS can be used to print a simple ticket to print gross, tare, and net weight, with a time and date stamp.

One of the RS232-1, or RS232-2 can be set to print tickets based on the usage of comports.


| Function           | Value | Setting  | Controlled by Commands  |
|--------------------|-------|----------|---|
| F5.2<br>Port1 Mode | 2     | <b>2</b> | RS232-1 mode selection<br>2 send out simple ticket with PRINT key |
| F5.5<br>Port2 Mode | 2     | <b>2</b> | RS232-1 mode selection<br>2 send out simple ticket with PRINT key |

The simple ticket includes a time / date stamp. To activate and set proper format, clock can be activated inside setup menu.

| Function                 | Value                        | Setting                      | Description   |
|--------------------------|------------------------------|------------------------------|---|
| F9.0<br>Clock<br>Setting | <b>0</b><br>1<br>2<br>3<br>4 | <b>0</b><br>1<br>2<br>3<br>4 | <p>Clock Setting.</p> <p>It is disabled as default set to 0</p> <p>It activates Time / Date Stamps if none 0.</p> <p>If activated, set it using UNIT key long press in weight mode.</p> <p>0 It is disabled.</p> <p>1 International/12hr format (dd/mm/yy) (HH:MMAM/PM)</p> <p>2 US/CAN/12hr format (mm/dd/yy)(HH:MMAM/PM)</p> <p>3 International/24hr format (dd/mm/yy) (HH:MM )</p> <p>4 US/CAN/24hr format (mm/dd/yy)(HH:MM)</p> |

The simple ticket format is as follows:

| Title  | Value      | Description  |
|--------|------------|--|
| Time:  | 12/24HR    | Time stamp can be set to 12 or 24 hours formats      |
| Date:  | US/CAN/INT | Date can be set to US, CAN, or International formats |
| Gross: | 000000     | Prints gross weight with proper unit                 |
| Net:   | 000000     | Prints net weight with proper unit                   |
| Tare:  | 000000     | Prints tare value with proper unit                   |

| Symbol  | Description   |
|---|---|
|  | <p><b>NOTICE!</b></p> <p>To set indicator in ticket printing format use F5 inside setup menu</p> <p>Refer to the troubleshooting diagnostic for error codes.</p> <p>Refer to the configuration section for more information on advance diagnostic</p> |

## 8. TROUBLESHOOTING


The 815BS indicators have comprehensive tools for troubleshooting, including diagnostic lights, onboard lights, error codes, message codes, and advance diagnostics inside setup menu. In cases where the failure or malfunctions is detected diagnostic tools can be used to identify the problems.


The indicator is supplied by an internal battery when is plugged off the wall. A 2032 type coin battery is located on board to keep the time and date. It is installed on a socket and is replaceable.

The LED LD1 on the main board can be used as basic diagnostic for functionality of the indicator. It will blink ½ seconds showing the normal operation of the indicator.

The position of the jumpers on the main board must be carefully observed and set.

### 8.1 CONTROLLER BOARD

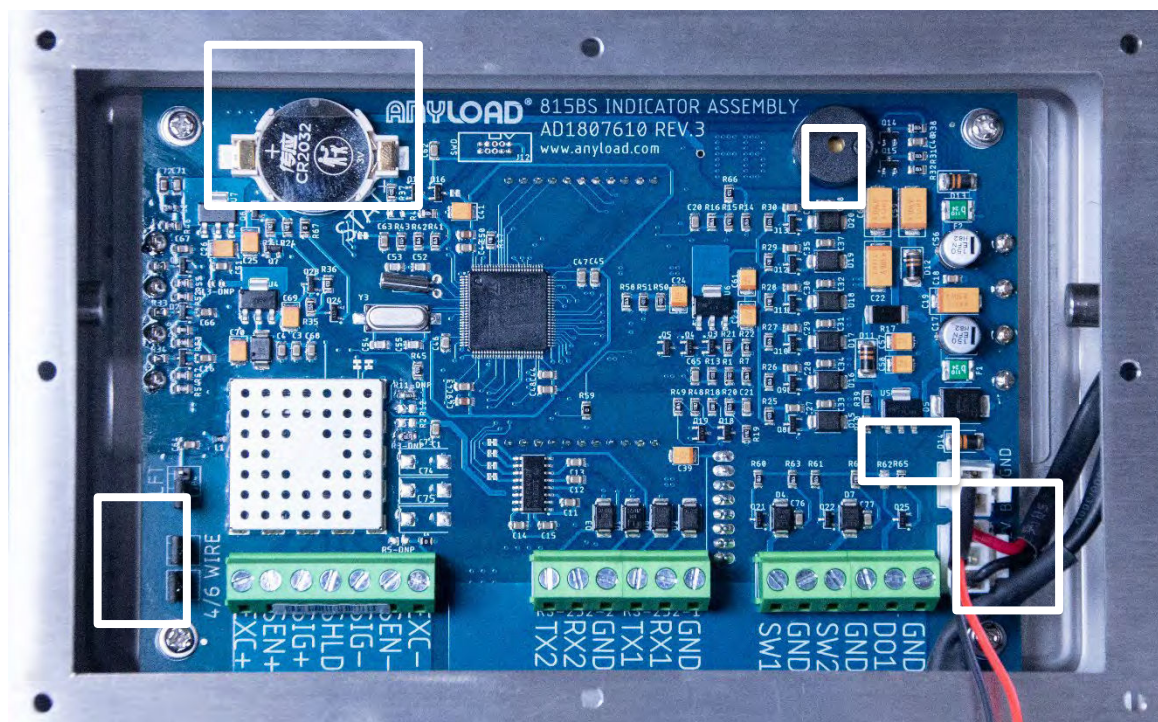

| Symbol  | Description  |
|---|--|
|  | <p><b>NOTICE!</b></p> <p>The battery is rated for a 2032-coin cell type<br/> Refer to the troubleshooting diagnostic lights and push buttons section for more information<br/> Refer to the configuration section for more information on advance diagnostic</p> |

## 8.2 ERROR CODES

The 815BS indicators have a comprehensive error code messages to identify the issues, and to operate under guidelines of the regulatory bodies.


| Error  | Description                | Reason                                   |
|--------|----------------------------|--|
| --E0-- | Scale Overload             | Capacity / Over Setting F1.7, and F1.8   |
| --E1-- | Can't Zero                 | Unstable / Zero Range Setting F2.0       |
| --E2-- | Can't Tare                 | Unstable / Tare Regulation Setting F2.6  |
| --E3-- | Can't Print                | Unstable / Scale is Not Stable           |
| --E4-- | Can't Zero on Power Up     | Unstable / Exceeds Zero Range            |
| --E5-- | Calibration Checksum Error | Set Factory Default / Call for Service   |
| --E6-- | Zero Checksum Error        | Set Factory Default / Call for Service   |
| --E7-- | Can't Clear Tare           | NTEP/CAN/OIML Tare Regulation F2.6       |
| --E8-- | Can't Display Weight       | Out of Range Display / Scale Calibration |
| --E9-- | Can't Display Count        | Out of Range Counts / Scale Calibration  |

## 8.3 JUMPER SETTING

The 815BS have few jumper headers on the main board. They are to be set accordingly.

| Label     | Description         | Reason  |
|-----------|---------------------|---|
| LFT       | Non-Legal for Trade | Closing this will bypass setup password             |
| 4/6 WIRE1 | 4/6 Wire Load Cells | Close this for 4 wire load cells with no sense line |
| 4/6 WIRE2 | 4/6 Wire Load Cells | Close this for 4 wire Load cells with no sense line |

To activate LFT switch, F1.9 must be set to LFT.

| Symbol  | Description  |
|---|--|
|  | <p><b>NOTICE!</b></p> <p>LFT jumper must be open for Legal for Trade applications<br/>Do Not jumper any other jumpers on the board, as may cause damage to the device<br/>4/6 Wire jumpers are closed as default for both 4 or 6 wire load cells</p> |

## 8.4 AUXILIARY INPUTS

The 815BS indicators are equipped with two dry contact digital inputs on board for the use of auxiliary functions. The digital inputs can individually be programmed for the purpose of remote ZERO, TARE, and other possible function. Digital inputs only need a dry contact to activate the switch. The SW1 and SW2 can be programmed in the setup menu.

| Function         | Value | Setting        | Controlled by Commands   |
|------------------|-------|----------------|--|
| F5.7<br>SW1 Mode | 0-9   | <b>SW1:0-9</b> | 1-9: ZTCGNKLUP<br>ZERO,<br>TARE,<br>CLEAR,<br>GROSS,<br>NET,<br>kg,<br>lb,<br>UNIT,<br>PRINT |
| F5.8<br>SW2 Mode | 0-9   | <b>SW2:0-9</b> | 1-9: ZTCGNKLUP<br>ZERO,<br>TARE,<br>CLEAR,<br>GROSS,<br>NET,<br>kg,<br>lb,<br>UNIT,<br>PRINT |

The DO1 digital out put also can be used for the setpoint activation.

The DO1 works respectively with the set points settings in setup menu.

| Symbol  | Description   |
|---|---|
|  | <p><b>NOTICE!</b></p> <p>The SW1, and SW2 are transistor dry contact input.<br/>No external voltage to be applied on SW1, and SW2<br/>DO1 is a open collector transistor output</p> |




## 8.5 ADVANCE DIAGNOSTIC

The diagnostic section of the inside menu is used for display testing and clock setting.

| Function              | Value  | Setting | Description   |
|-----------------------|--------|---------|---|
| F9.0<br>Clock Setting | 0      | 0       | Clock Setting.  |
|                       | 1      | 1       | It is disabled as default set to 0.   |
|                       | 2      | 2       | It activates Time / Date Stamps if not 0.   |
|                       | 3      | 3       | If activated, set it using UNIT long press in weight mode.  |
|                       | 4      | 4       |   |
|                       |        |         | 0 It is disabled.<br>1 International/12hr format (dd/mm/yy) (HH:MMAM/PM)<br>2 US/CAN/12hr format (mm/dd/yy)(HH:MMAM/PM)<br>3 International/24hr format (dd/mm/yy) (HH:MM)<br>4 US/CAN/24hr format (mm/dd/yy)(HH:MM) |
| F9.1<br>Display Test  | XXXXXX | None    | Runs a full display test  |




In normal weight mode, use  long press key to edit the time / date in CLOCK mode.

## 8.6 BATTERY SYMBOL

The 815BS indicators are equipped with an internal battery with a built-in charger. When the indicator is plugged in to the wall, it will re charge the battery and supplies the indicator. When the indicators are plugged off the wall, the battery will supply the indicator. The internal battery is a 7.4V / 10,000mAH lithium- ion battery, capable of supplying the indi9catoer for up to 500 hours of continuous operation, when the back light is off, and one 700R load cell is connected. The symbol of the battery is located on the main LCD for basic troubleshooting of the internal battery.

| Function        | Value  | Setting | Controlled by Commands                 |
|-----------------|--------|---------|--|
| F9.2<br>Battery | V x.xx | V X.XX  | It shows the battery voltage in volts. |

| Symbol  | Description  |
|---|--|
|  | <p><b>NOTICE!</b></p> <p>The battery is rated 7.4V at 10,000mAH</p> <p>The battery is protected by a solid-state fuse</p> <p>The batter is under constant re charge when the indicator is plugged in</p> |





Please Contact our Authorized Dealer for Technical Assistance:

## Anyload Weigh & Measure Inc.

North America Toll Free: 1-855-ANYLOAD (269-5623)

Email: [info@anyload.com](mailto:info@anyload.com)

[www.anyload.com](http://www.anyload.com)

