



AXA

Axle Weigh Pads



1-855-269-5623
www.anyload.com

PN-250802-A

TECHNICAL MANUAL

V1.0.0

© ANYLOAD Weigh & Measure Inc. All rights reserved.

ANYLOAD® is a registered trademark of ANYLOAD Weigh & Measure Inc.

All other brand or product names mentioned in this document are trademarks or registered trademarks of their respective owners.

All information contained in this document is, to the best of our knowledge, complete and accurate at the time of publication. ANYLOAD Weigh & Measure Inc. reserves the right to make changes to the technology, features, specifications, and design of its equipment without prior notice.

The most current version of this document, along with any software, firmware, and other product updates, can be found on our website:

www.anyload.com

Legal Notice

ANYLOAD products are subject to our **Standard Terms and Conditions of Sale, Warranty Policy**, and applicable regulatory compliance requirements as they may be updated without notice. It is the user's responsibility to ensure proper installation, operation, and maintenance of the equipment as outlined in this manual and in accordance with all relevant laws and standards.

ANYLOAD Weigh & Measure Inc. disclaims all warranties not expressly stated in the Warranty Policy, including but not limited to implied warranties of merchantability and fitness for a particular purpose. ANYLOAD shall not be liable for any direct, indirect, incidental, or consequential damages arising from the use or inability to use this equipment.

CONTENTS

1.	Introduction	3
1.1	Safety	3
2.	Description.....	5
2.1	Plate.....	5
2.2	Display and keys	6
2.3	Battery Charge	6
3.	Installation	7
3.1	Sequential Weighing.....	7
3.2	WIM (Weigh In Motion).....	8
3.3	Synchronous Weighing	9
4.	Settings.....	9
5.	Test modes.....	10
6.	Check Messages	11
7.	Compliance.....	11
8.	Specifications.....	12
8.1	General	12
8.2	Wireless.....	12
8.3	Dimensions.....	13

Revision History:

Record with brief description of all revisions made to product or manual

Version	Date	Description
1.0.0	August 19th, 2025	First public release version.

The most current version of this document, along with any software, firmware, and other product updates, can be found on our website:

www.anyload.com

1. Introduction

This manual provides information on installation, configuration, calibration and servicing of the AXA [Category].

For questions regarding this manual or the operation of ANYLOAD products, please contact your authorized ANYLOAD distributor or visit our website at www.anyload.com for support resources and service information.

1.1 Safety

READ this manual BEFORE operating or servicing this equipment or systems with this equipment incorporated.






FOLLOW these instructions carefully.

DO NOT allow untrained personnel to operate, clean, inspect, maintain, service, or modify this equipment.

SAVE and distribute this manual for future reference.

Failure to follow the instructions or heed the warnings could result in injury or death. Contact any ANYLOAD dealer or distributor for replacement manuals.

Indicative Markings:

Symbol	Significance
 WARNING 	Warns of a potentially dangerous situation which can result in serious physical injury or death
 CAUTION	Warns of a potentially dangerous situation which can result in slight or moderate physical injury
Notice	Failure to comply to information with this marking may lead to damage to property
 Important	Important information about the product
 Tip	Application tips and other information that may be helpful
<i>For emphasis (Italics)</i>	Italics are used to emphasize key information

General Safety:

WARNING

ONLY qualified professionals approved should carry out intrinsically safe installations. This work involves extensive knowledge of the product, specific safety standards, and the potentially hazardous environment in which it will


- Do not allow minors or inexperienced individuals to operate this unit.
- Ensure the unit is fully assembled before operation.
- Keep hands and fingers away from slots, openings, or any potential pinch points.
- Do not use this product if any component appears cracked or damaged.
- Avoid making alterations or modifications to the unit.
- Do not remove or obscure any warning labels.
- Do not submerge the unit in water.

- Before opening the unit, ensure the power cord is disconnected from the power source. Disconnect all power sources before servicing, as multiple power sources may be present. Failure to do so may result in property damage, personal injury, or death.
- For permanently connected equipment, incorporate a readily accessible disconnect device in the building's installation wiring.
- Pluggable units must be installed near an easily accessible socket/outlet.
- Use only copper or copper-clad aluminum conductors when wiring.

Recommendations for Proper Use:

- Keep the instrument away from heat sources and direct sunlight.
- Protect the instrument from rain unless it is a special IP-rated version.
- Do not clean with water jets unless specified for IP-rated models.
- Avoid dipping the instrument in water or spilling liquids on it.
- Use a soft, dry cloth for cleaning; do not use solvents or abrasive materials.
- Do not install the unit in areas with explosion hazards unless with specially rated models.
- If the working environment reaches the unit's temperature limits, ensure proper airflow around the instrument to prevent malfunctions such as sudden shutdowns or disconnections.
- Use only approved enhancements and batteries. Do not connect incompatible products. Use only batteries, chargers, adaptor, and enhancements approved by vendor for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. For availability of approved enhancements, please check with your dealer.
- Do not use the product in a place with a high-voltage current or severe electronic noise.
- Do not use the product in a place with severe vibration.
- Do not put too much pressure to keys.

Disposal Guidelines:

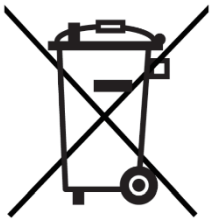


Product Disposal: Dispose of this product at authorized waste collection centers at the end of its life cycle. Proper disposal prevents environmental and health risks and supports recycling. Illegal disposal may result in legal penalties.

Battery Disposal: Dispose of batteries at designated centers as per local laws. Batteries may contain harmful substances (e.g., Cd, Li, Hg, Pb) and must not be discarded with household waste. Improper disposal may result in legal penalties.


⚠ WARNING ⚠

Be cautious of below situations, when placing the product on the road.

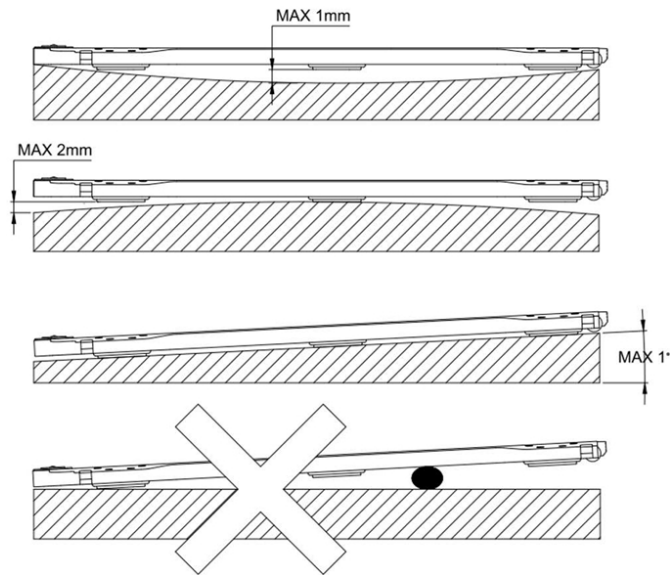


2. Description


2.1 Plate

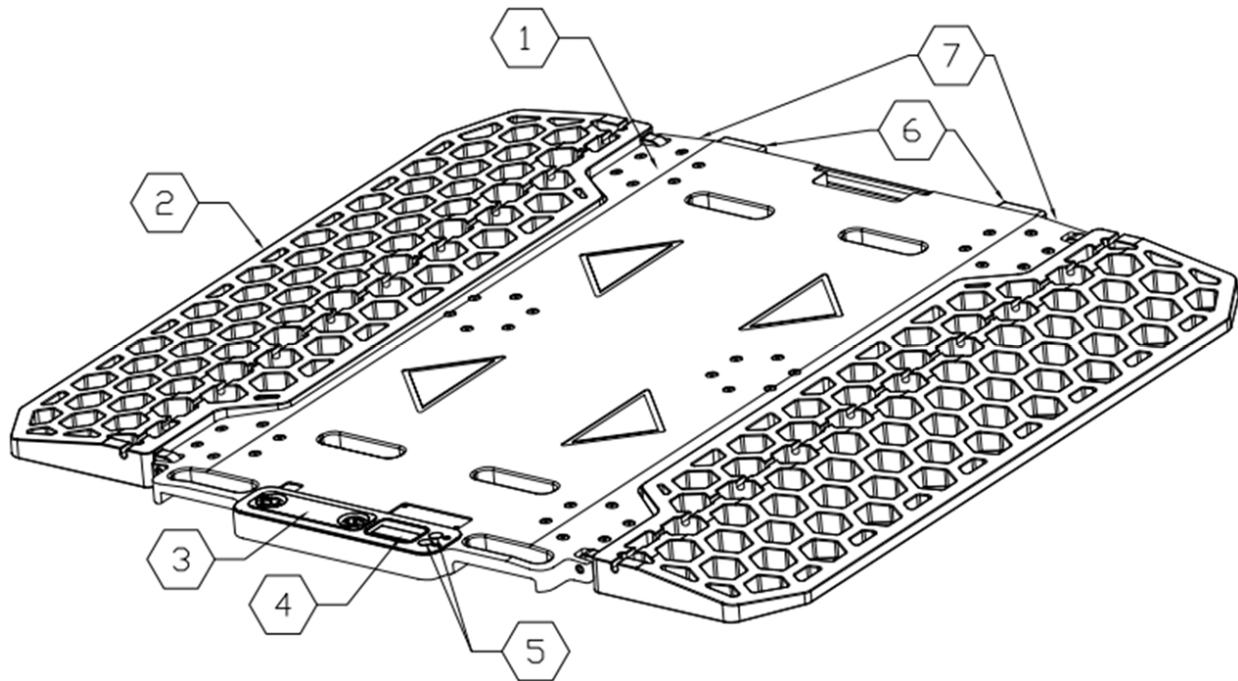

No	Name	Functions
1	Load cell	Integrated with six load cells for accurate weight measurement.
2	Ramps	Urethane ramps designed for smooth vehicle entry.
3	Battery cover	Waterproof enclosure that protects the internal battery.
4	LCD display	Shows weight readings and system messages.
5	Touch switch	Capacitive touch controls for power and zeroing functions.

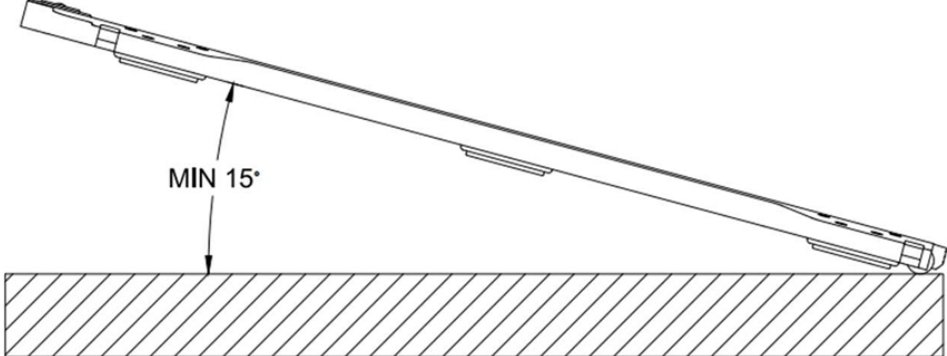6	Stand rubber	Provides support when placing the product in an upright position.
7	Wheels	<p>Mounted on the bottom for transportation.</p> <p>⚠ CAUTION</p> <p>When moving the product, tilt it at minimum of 15 degrees, as shown below. Failure to do so may result in damage to the load cell covers.</p> 


2.2 Display and keys

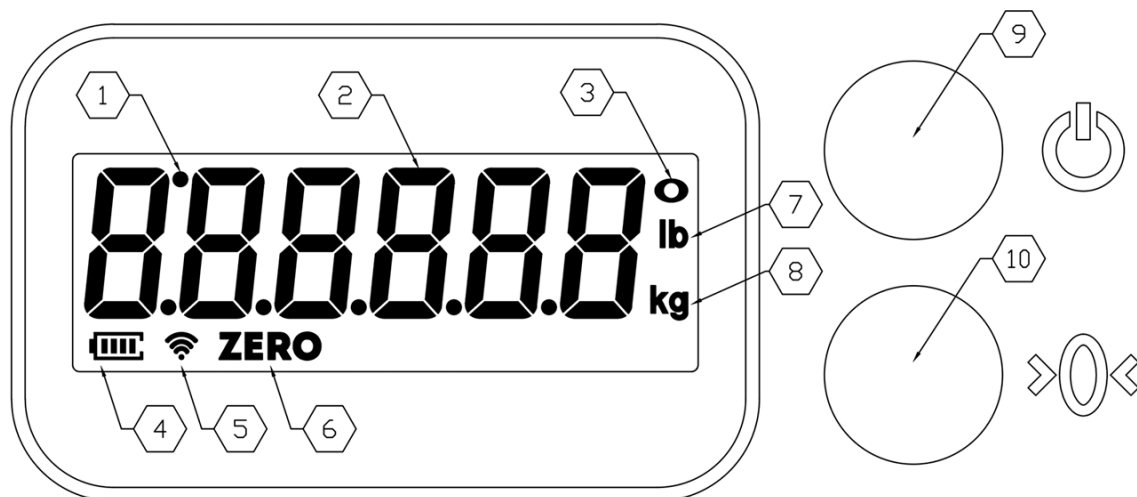

No	Functions
1	Blinks to indicate that device is in WIM (Weigh-In-Motion) mode
2	Shows the current measured weight value
3	Indicates when a stable measurement has been achieved
4	Displays the remaining battery capacity
5	Displays signal strength for wireless connectivity (applicable to wireless models)
6	Appears when the measured value is 0
7	Indicates that the unit of measurement is in pounds
8	Indicates that the unit of measurement is in kilograms
9	Touch-sensitive control for turning the device on or off - Touch the power switch 3 times in a row to power on or off
10	Multi-function switch, - Touch the switch 3 times in a row, - - - is displayed and resets to 0 - Touch the switch 3 times in a row, - - - - is displayed and the backlight turns on or off.


2.3 Battery Charge

- Indicates the remaining capacity of the battery

- If the battery icon is , charge the battery immediately
① Tip When low battery, the status is displayed in the indicator.
- Charging method:
 - 1) Turn clamps that exit on both sides of battery cover to the left by a quarter.
 - 2) Be sure to charge by supplied battery charger.
 Charge terminal is USB-C. You can charge by USB-A port of PC, laptop and power adapter.
 - 3) The red lamp turns on when it is charging. When charging is completed, the lamp goes green.**① Tip** The estimated time for charging is about 5 hours but charging time can be varied according to environment conditions.
- (4) Inserting is in reverse.

⚠ CAUTION


Do not connect to reverse battery polarity. Battery should only be replaced in a non-hazardous area using the battery types specified in this manual.

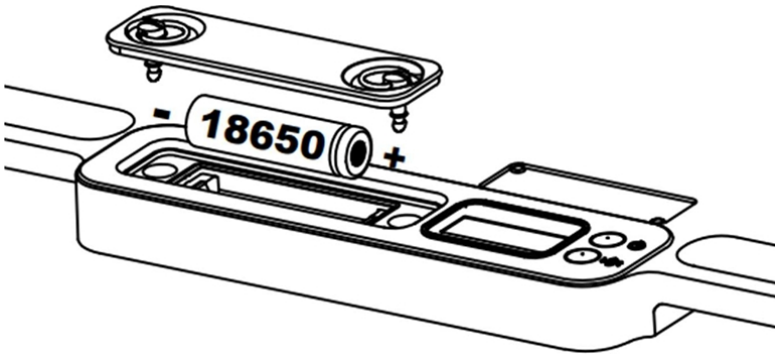

3. Installation


3.1 Sequential Weighing

- Configuration: 2 plates / 1 indicator
- Method: After weighing axles one by one, calculate the total weight of the vehicle by summing up the weight of each axle
- Mode: Static mode or WIM (Weigh-In-Motion) mode.
- Accuracy: $\pm 0.1 \sim 0.3\%$ (WIM: $\pm 1 \sim 3\%$)
- Installation: Install the plate 1 on the left side of driving direction and install the plate 2 on the right side.

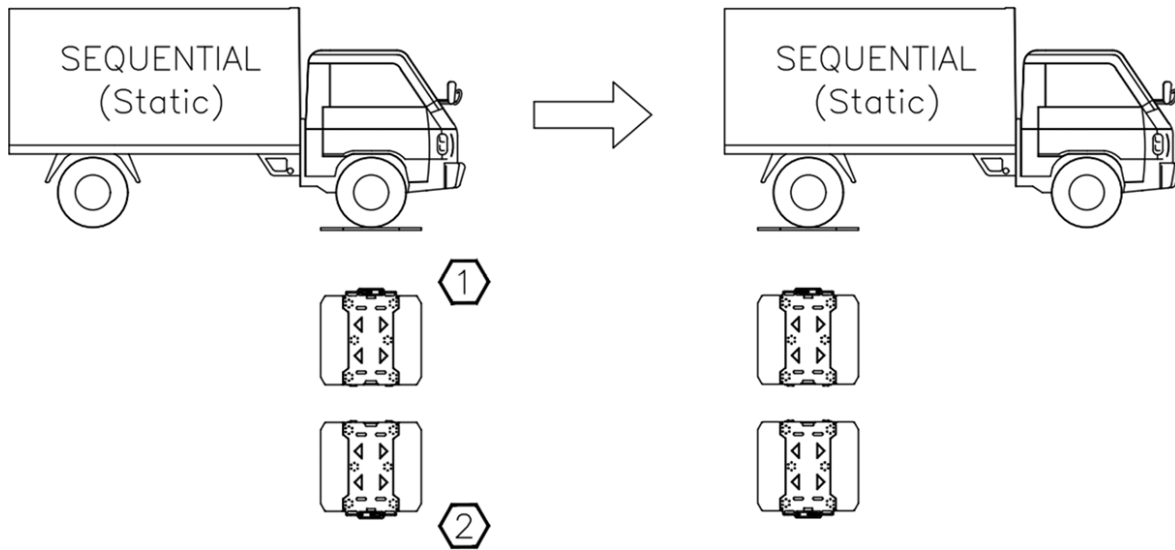

⚠ CAUTION

As shown below, if inter axle distance is short, you must install sufficient dummy pads.

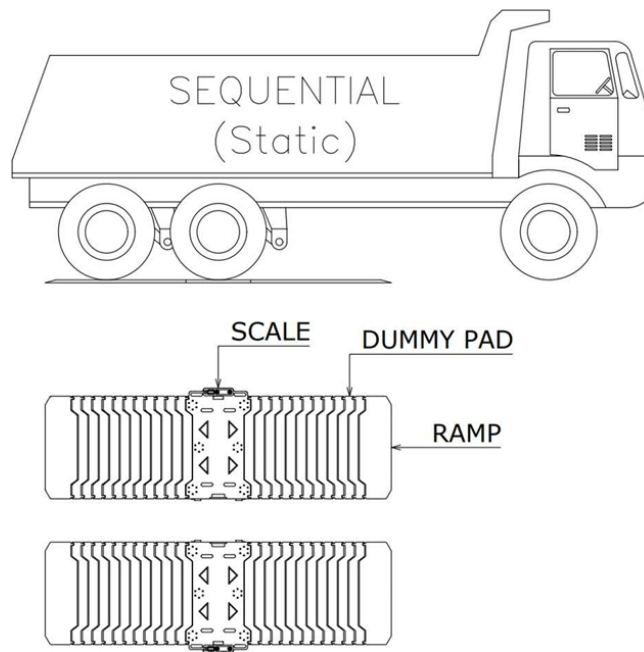


⚠ CAUTION

3.2 WIM (Weigh In Motion)


- Configuration: 2 plates / 1 indicator
- Method: After weighing axles one by one, calculate the total weight of the vehicle by summing up the weight of each axle
- Accuracy: WIM: $\pm 1 \sim 3\%$
- Installation: Install the plate 1 on the left side of driving direction and install the plate 2 on the right side.

In case of WIM (Weigh-In-Motion) mode, you must install the dummy pads (no shorter than 3m/ 10ft) in front and/or back of the vehicle.

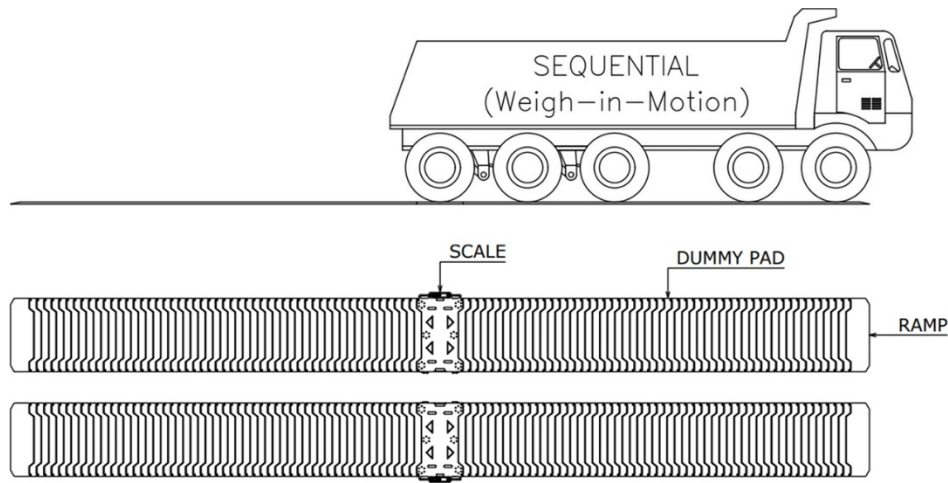


3.3 Synchronous Weighing

- Configuration: The number of plates equal to the number of wheel / 1 indicator
- Method: Measure all axles at the same time
- Mode: Synchronous mode
- Accuracy: $\pm 0.1\%$
- Installation: Install the plate 1 on the left side of driving direction and install the plate 2 on the right side. You can install the plates for other axles in the same way.

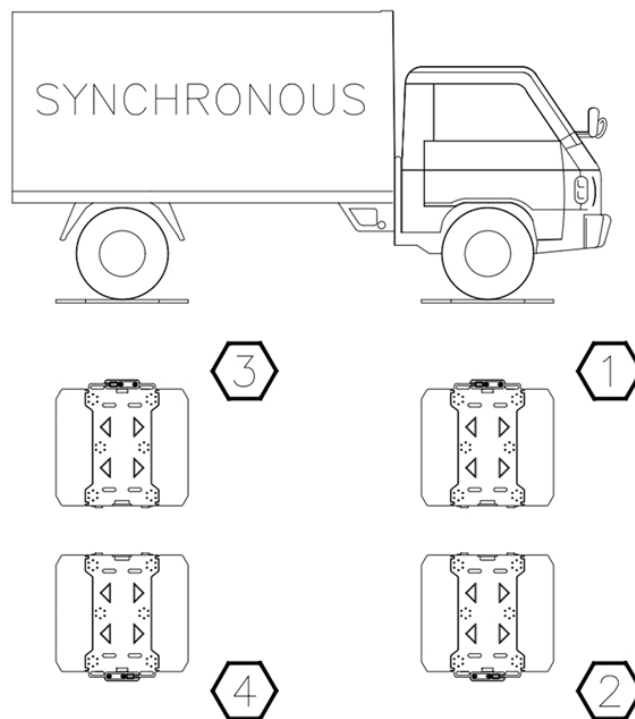

4. Settings



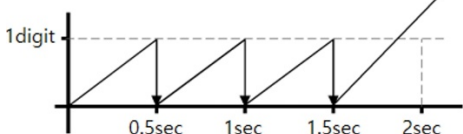
How to enter	<p>After powering on, touch the power key for 2 seconds and SEt will be displayed. At this time, if you release the power key, the setting mode starts.</p> <p>on --- F= 100 touch the power switch for 2 seconds SEt</p>
Used keys	<p>POWER: Used to increase the setting constant one by one.</p> <p>ZERO: Used to move to next menu after completing input value.</p>
F01-0	<p>Automatic power off (range: 0, 1 / default: 0)</p> <p>When the wireless communication with the indicator is lost, power is turned off automatically after 70 seconds. (0: Not used, 1: Used)</p>
F02-2	<p>Automatic zero condition (range: 0~9 / default: 2)</p> <p>This function will automatically bring the display back to zero when there are small deviations.</p> <p>For example: F02-1 setting Display will automatically zero at less than 1 digit per 0.5 second. Diagram shown below.</p> 
F03-6	<p>Brightness of the backlight (range: 0~9 / default: 6)</p> <p>Adjust the backlighting brightness. (10%~100%)</p>
F04-0	<p>Weighing unit (range: 0, 1 / default: 0)</p> <p>0: kg 1: lb</p>
F05-0	<p>Weight backup function (range: 0, 1 / default: 0)</p> <p>When enabled, the weight value is displayed if there are any weighing objects when the power is turned on.</p> <p>0: OFF 1: ON</p>
F06-1	<p>Wireless function (range: 0, 1 / default: 1)</p> <p>0: OFF 1: ON</p>

Tip

- After changing the settings values, you must confirm the last menu(F06) and exit the mode.
- To turn off the product in setting mode, press the power switch for 2 seconds.




5. Test modes

How to enter	<p>After turning on the product, when the version is displayed, touch the power switch for 4 seconds and SEt is displayed, and then TEST displayed. At this time, if you release the power switch, the test mode starts.</p> <p>on --- F= 100 touch the power switch for 2 seconds SEt TEST</p>
Used keys	<p>POWER: Used to test equipment.</p> <p>ZERO: Used to move next menu.</p>
<p>TEST 1</p> <p>888888</p> <p><small>kg</small></p> <p><small>ZERO</small></p>	<p>Display test</p> <p>It operates automatically and the whole display is ON.</p>

	Key test Touch a key that you want to test, and then the display message will be shown. (POWER: 1 / ZERO: 2)
	Load cell test Displays the A/D (analog-to-digital) conversion constant. This value may vary depending on the equipment. To verify proper function, apply force to the scale and confirm that the displayed value changes accordingly. If the value does not change, remains at '0', or displays a check message, immediately contact your dealer for service.
	Backlight test Touch the power switch to turn on(off) the backlight. Touch the zero switch to exit test mode.




 **Tip** To turn off the product in test mode, press the power switch for 2 seconds.


6. Check Messages

Display	Description
	Error in the load cell connection or in the A/D convertor. Please check the load cell and then contact dealer to resolve this technical problem.
	The current weight is out of range for zero point. Zero key is operated within 50% of maximum capacity.
	The gross weight is over maximum capacity. Don't load the article whose weight is heavier than the maximum capacity.

7. Compliance

Indicative Markings:

CE Certification 	The CE mark indicates that the manufacturer guarantees that the product complies with the requirements of the relevant EU Directives.
NTEP (US Legal-for-trade) Certification 	The NTEP mark denotes that the product is legal-for-trade certified in the US and other recognizing jurisdictions by meeting the National Type Evaluation Program (NTEP) requirements set by the National Conference of Weights and Measures (NCWM) in the United States of America.
OIML MAA Certification 	The OIML Mutual Acceptance Arrangement (MAA) mark indicates that the product is legal-for-trade certified in the EU, Australia, New Zealand, Canada, and other recognizing jurisdictions by meeting the standards set by the International Organization of Legal Metrology (OIML).

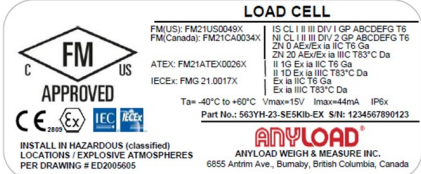FM / Explosive Atmospheres Certification


Important

Every single certified non-incendive / intrinsically safe product **MUST** bear this label, which shall indicate that the product is FM (US & Canada), ATEX, and IECEx-approved for use in potentially explosive environments in recognizing jurisdictions.

The model should also have an “-EX” suffix in its part number.

8. Specifications




8.1 General

MODEL	AXA-3			AXA-5		AXA-8		
CAPACITY (tons)	0.5	1	2	3	5	10	15	20
DIVISION (kg)	0.2	0.5	1	1	2	10	10	20
DISPLAY	5-digit FSTN LCD & LED Backlight							
OPERATING SWITCH	2 Capacitance touch switches							
RAMP/DUMMY MATERIAL	Urethane							
FRONT COVER MATERIAL	Polycarbonate							
BODY MATERIAL	Aluminum, Hammer-tone powder coating							
WIRELESS METHOD	Zigbee							
INGRESS PROTECTION	IP68							
BATTERY	Rechargeable 18650 Li-ion with PCM							
CHARGER	Exclusive battery charger							
OPERATING TIME	600hrs							
OPERATING TEMP.	-20°C ~ 60°C							
OPERATING HUMIDITY	85% R.H. (No condensation)							
PRODUCT WEIGHT (APPROX.)	5.8 kg / 12.8 lbs			16 kg / 35 lbs		19 kg / 42 lbs		
	Ramp included in weight					Ramp not included		

8.2 Wireless

PROTOCOL	802.15.4
INTERFERENCE IMMUNITY	DSSS (Direct Sequence Spread Spectrum)
ENCRYPTION	128-bit AES
RELIABLE PACKET DELIVERY	Retries/Acknowledgements
IDS	PAN ID and addresses, cluster IDs and endpoints (optional)
CONFIGURATION METHOD	API or AT commands, local or over-the-air (OTA)
CHANNEL	16 channels
FREQUENCY BAND	ISM 2.4GHz
ITU DESIGNATION	2M97G1D
MAXIMUM OUTPUT POWER	6.3mW / (+8dBm)
INDOOR/URBAN RANGE	30m international variant
OUTDOOR RF LINE-OF SIGHT	100m international variant
RF DATA RATE	250,000bps, Serial up to 1Mbps
RECEIVER SENSITIVITY	-102dBm (1% packet error rate)
SUPPLY VOLTAGE	2.1 ~ 3.6VDC

8.3 Dimensions

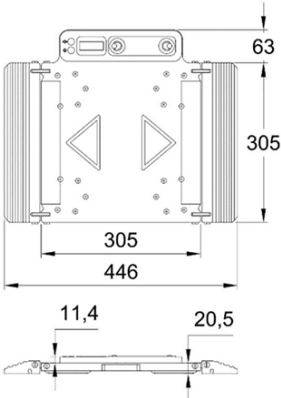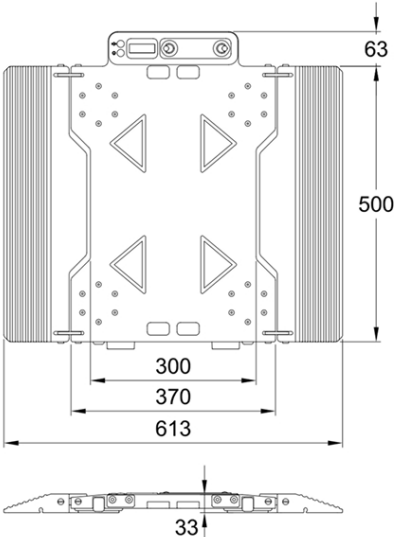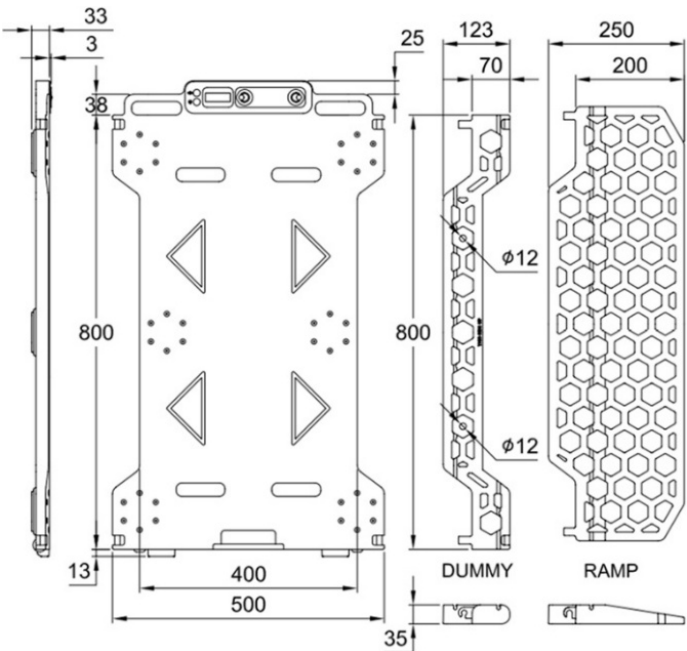AXA-3	 <p>Technical drawing of the AXA-3 component. The top view shows a rectangular shape with a central area containing four triangles. Dimensions include a top width of 63, a central width of 305, an outer width of 446, and a height of 305. The side view shows a thickness of 11,4 and a base width of 20,5.</p>
AXA-5	 <p>Technical drawing of the AXA-5 component. The top view shows a rectangular shape with a central area containing four triangles. Dimensions include a top width of 63, a central width of 300, an inner width of 370, an outer width of 613, and a height of 500. The side view shows a thickness of 33.</p>
AXA-8	 <p>Technical drawing of the AXA-8 component. The top view shows a rectangular shape with a central area containing four triangles. Dimensions include a top width of 33, a top offset of 3, a top width of 38, a central width of 400, an outer width of 500, and a height of 800. The side view shows a thickness of 13, a top offset of 25, a top width of 123, a top offset of 70, a central width of 800, and a bottom offset of 35. The detail view shows a width of 250, a height of 200, and a hole diameter of $\phi 12$. The component is labeled DUMMY and RAMP.</p>

Please Contact Our Authorized Dealer for Technical Assistance:

Notes:

V1.0.0
PN-250802

1-855-269-5623
www.anyload.com



© 2025 Anyload Weigh & Measure Inc.
Specifications subject to change without notice.

ANYLOAD®